

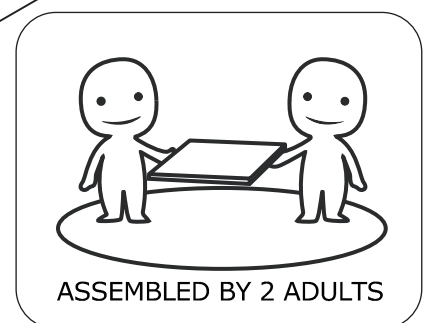




Dressing Table

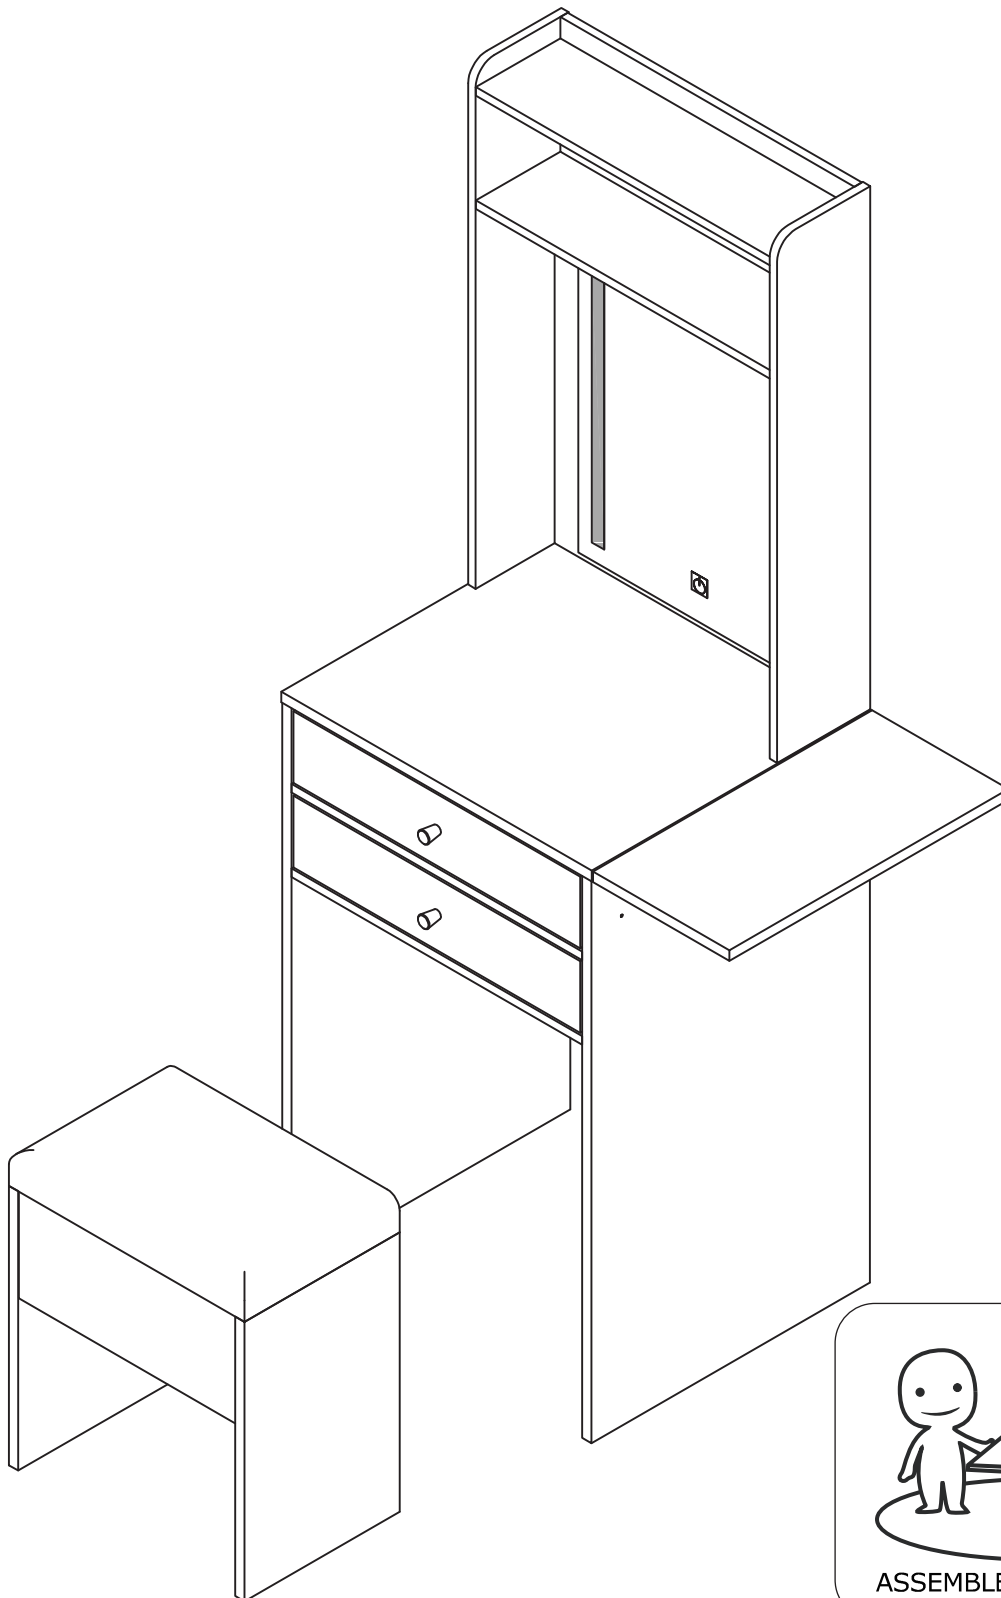

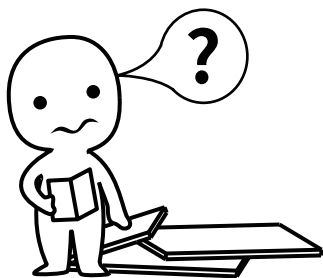


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

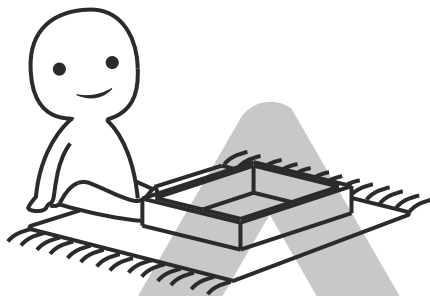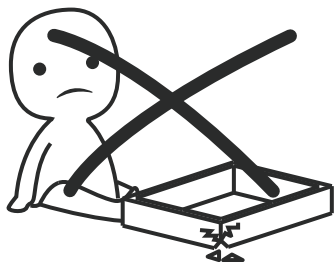



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

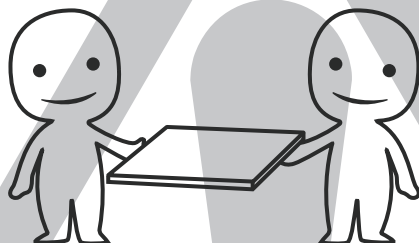

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

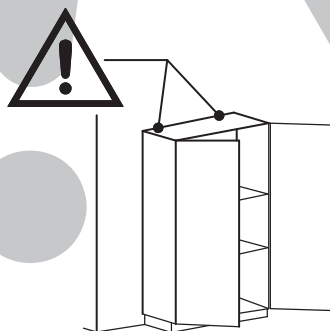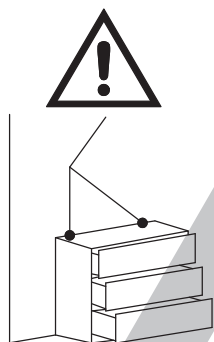

ANTI-TOPPLE WARNING !


Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

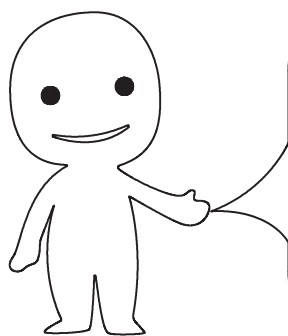


Please prepare the following tools

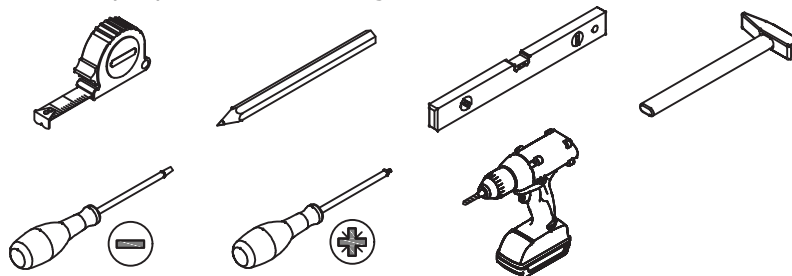


A x 59 Ø7 x 31 mm	B x 59 Ø15 x 11 mm	C x 23 Ø8 x 30 mm	D x 44 Ø3.5 x 12 mm
E x 2	F x 2	G x 2	H x 2
I x 23 Ø4 x 35 mm	J x 2	K x 2	L x 2 Ø4 x 18 mm
M x 2 Ø6 x 74 mm	N x 1	O x 1	

Board Identification

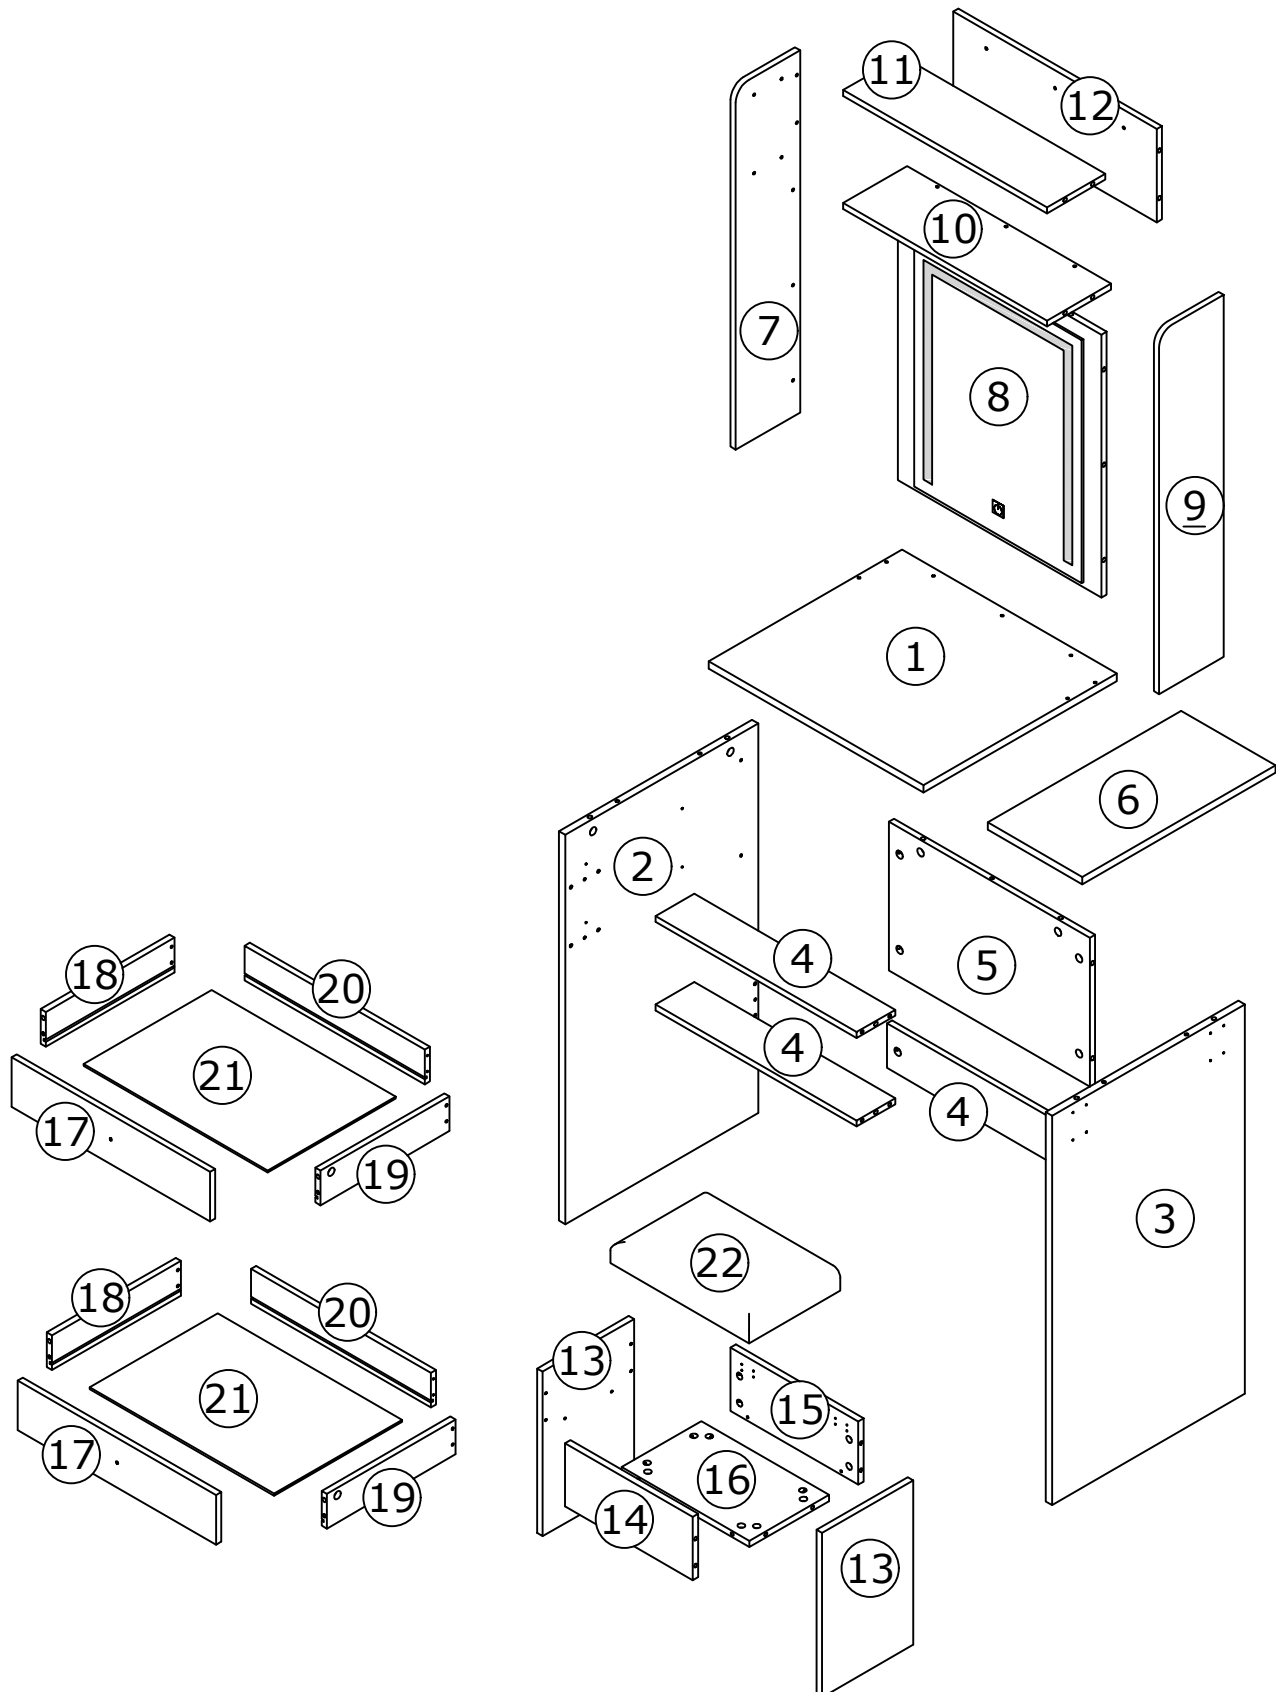


1

A x 10




Ø7 x 31 mm



C x 4



Ø6 x 30 mm

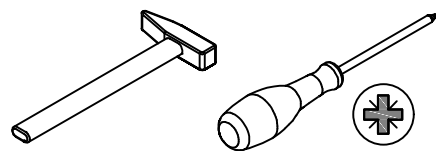


- Insert wood dowels (C) into panel (2) & (3) .
- Screw the cam bolt (A) into the panel (2) & (3) .

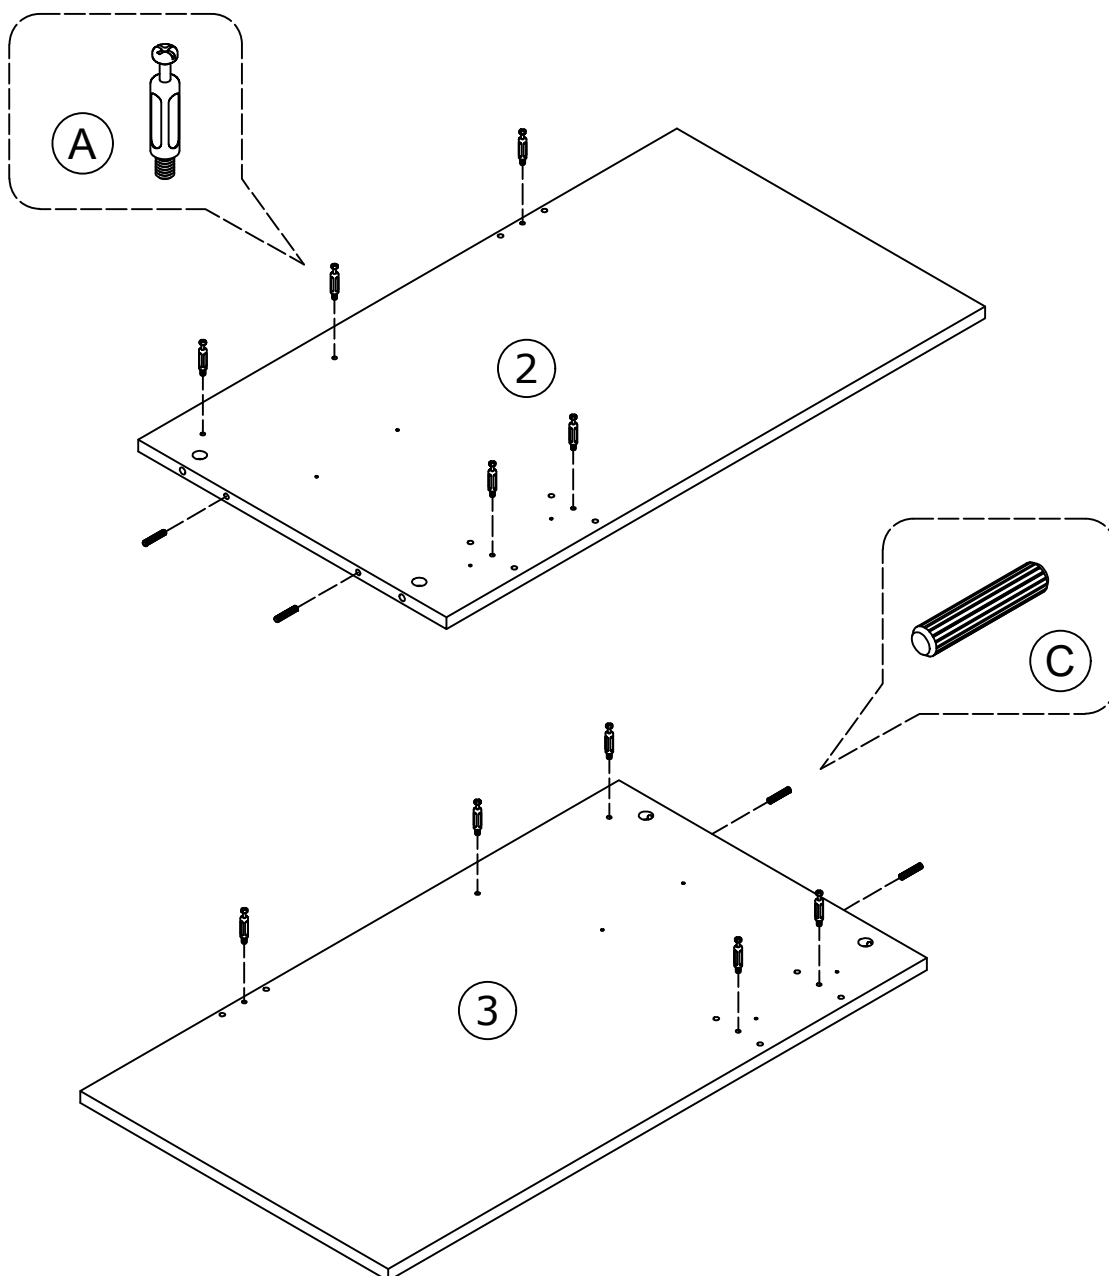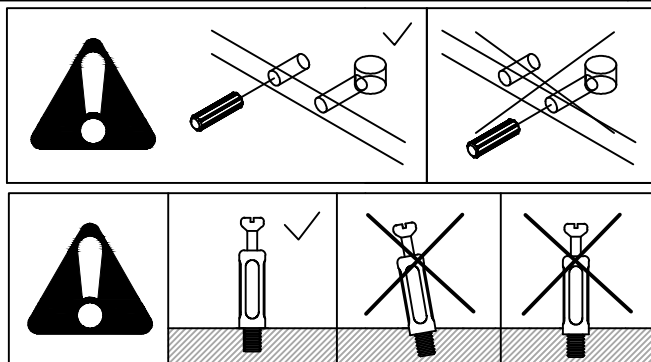


2


D x 8



Ø 3.5 x 12 mm

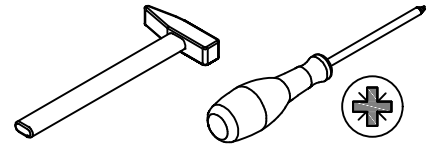


- Install drawer track (E) & (F) to panel (2) & (3) with screws (D)

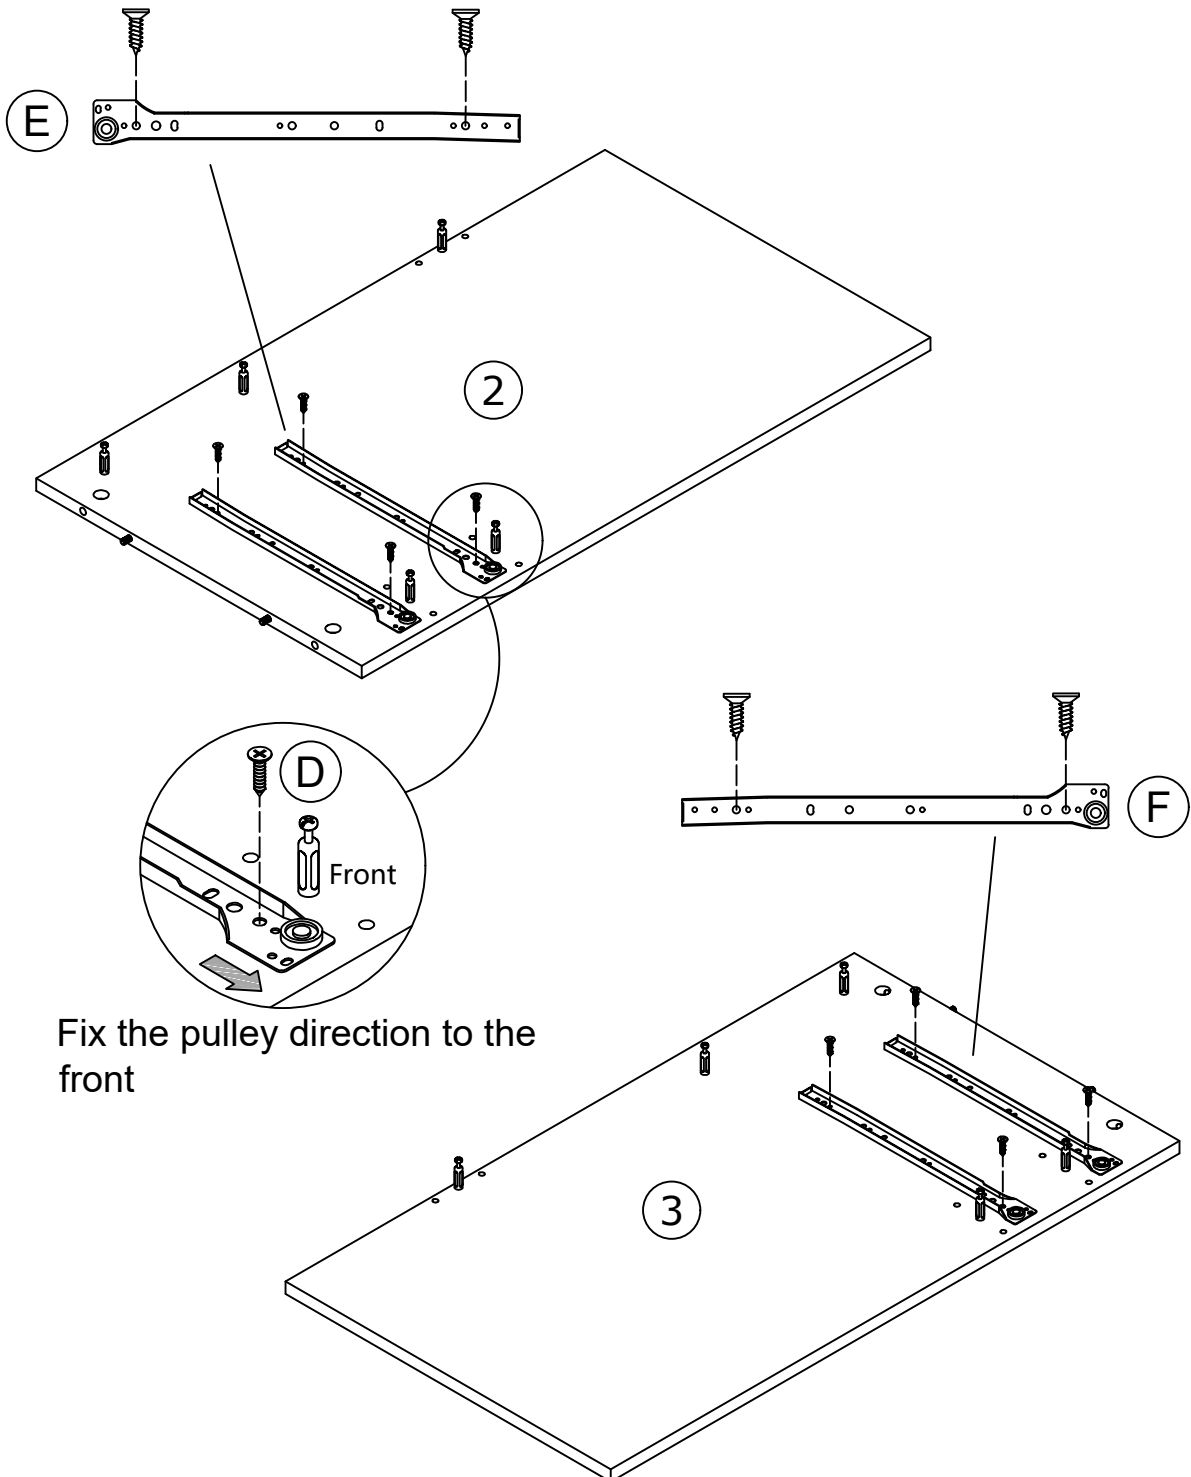


Fix the pulley direction to the front

3








A x 24



Ø7 x 31 mm

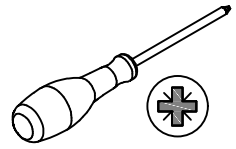

- Screw the cam bolt (A) into the panel (1) & (7) & (9).

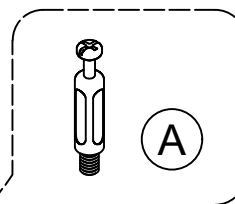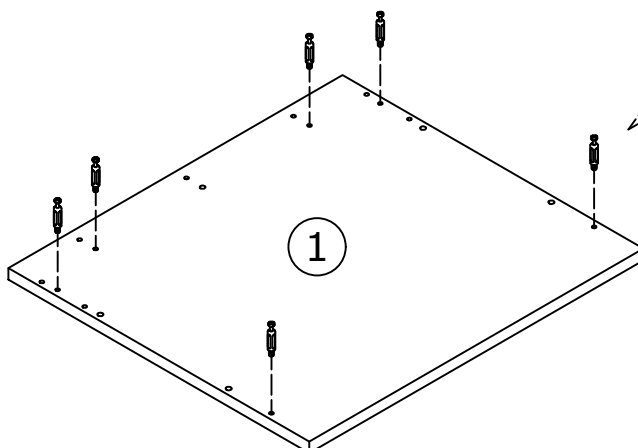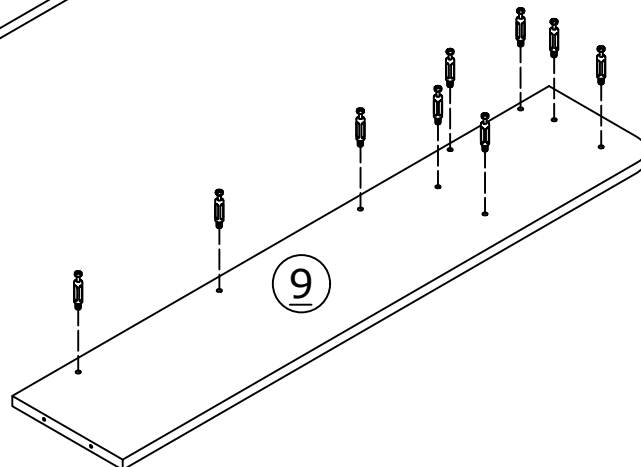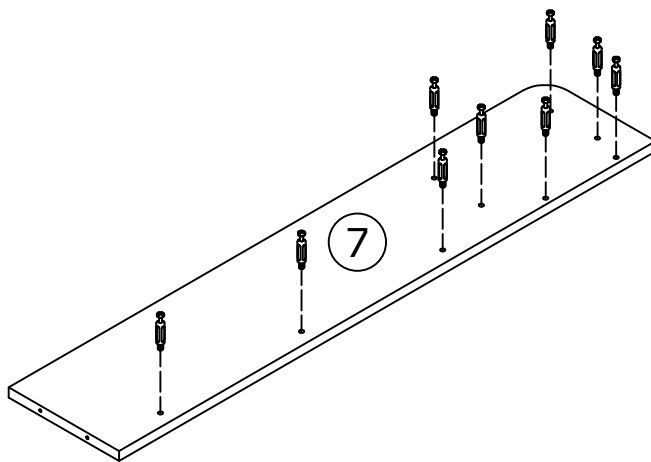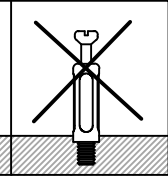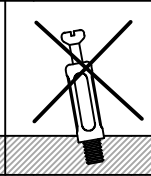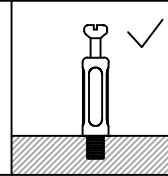


4

A x 3




Ø7 x 31 mm



C x 13



Ø6 x 30 mm

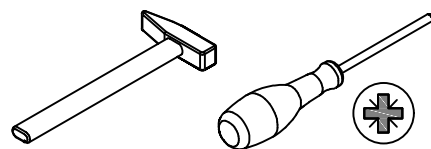

- Insert wood dowels (C) into panel (4) & (5) .
- Screw the cam bolt (A) into the panel (10) .

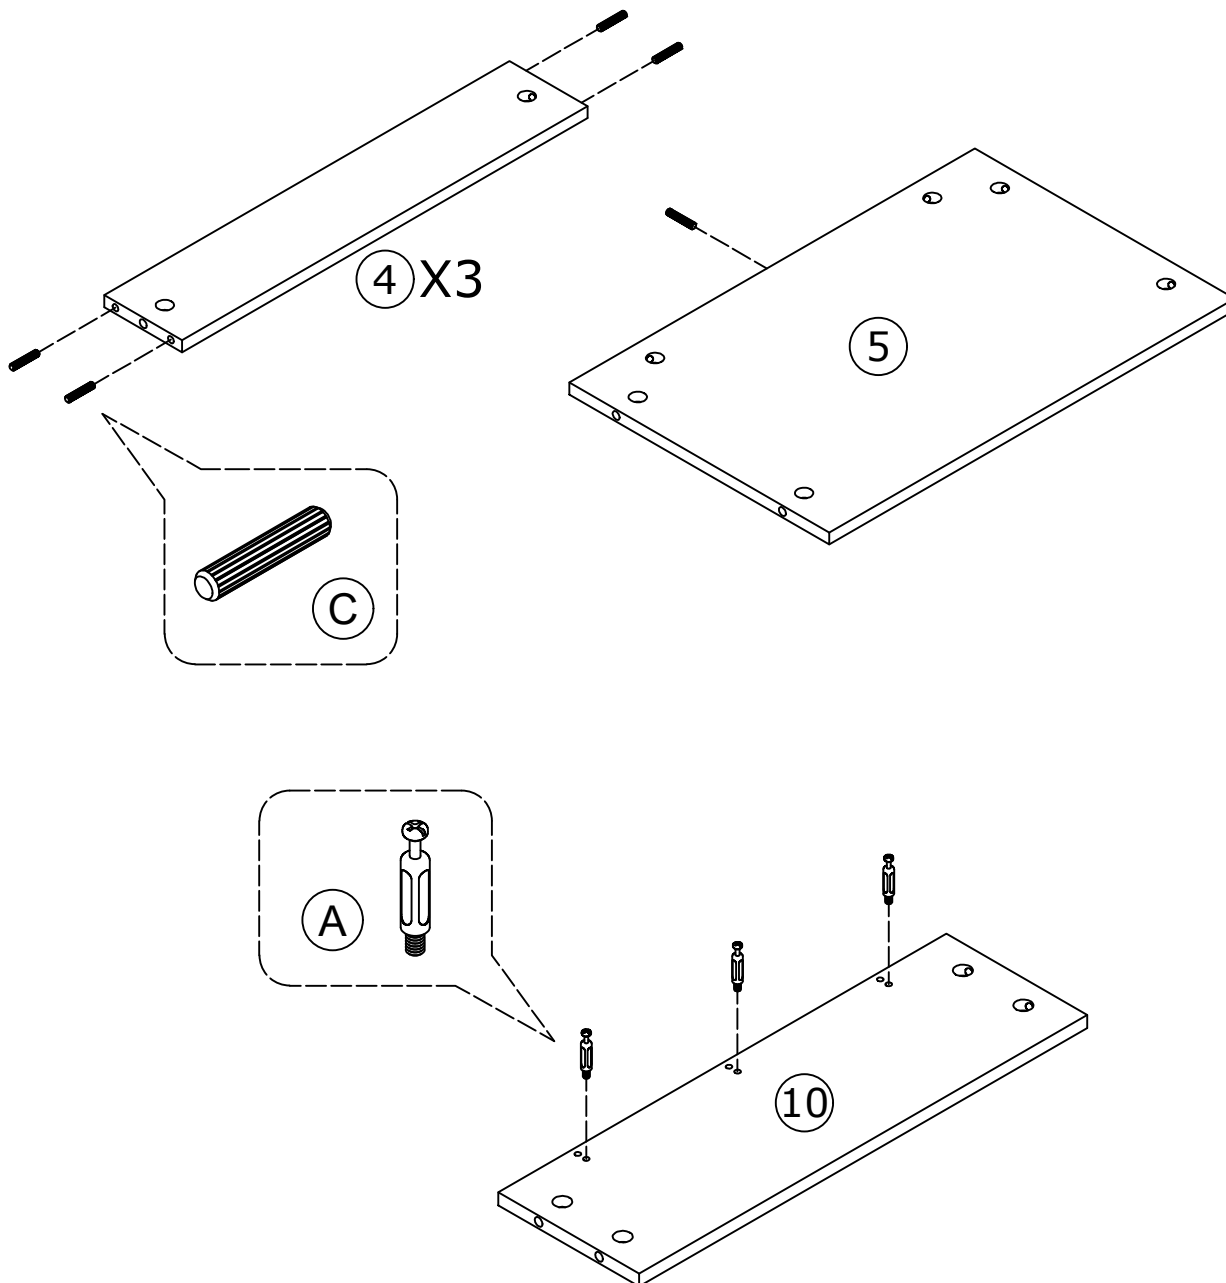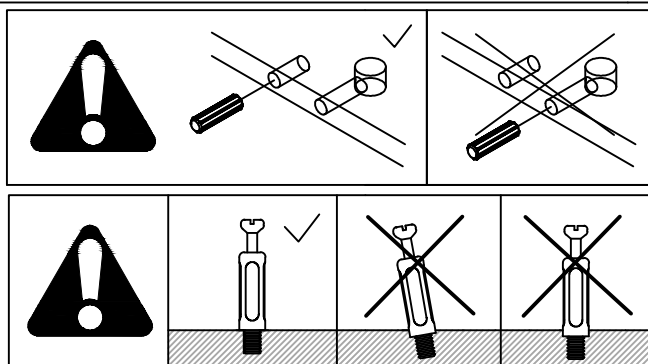


5


I x 6



Ø4 x 35 mm

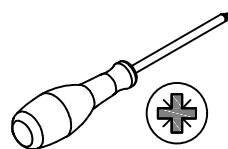

- Attach panel (12) to (11) with screws (I) .
- Attach panel (10) to (12) with screws (I) .

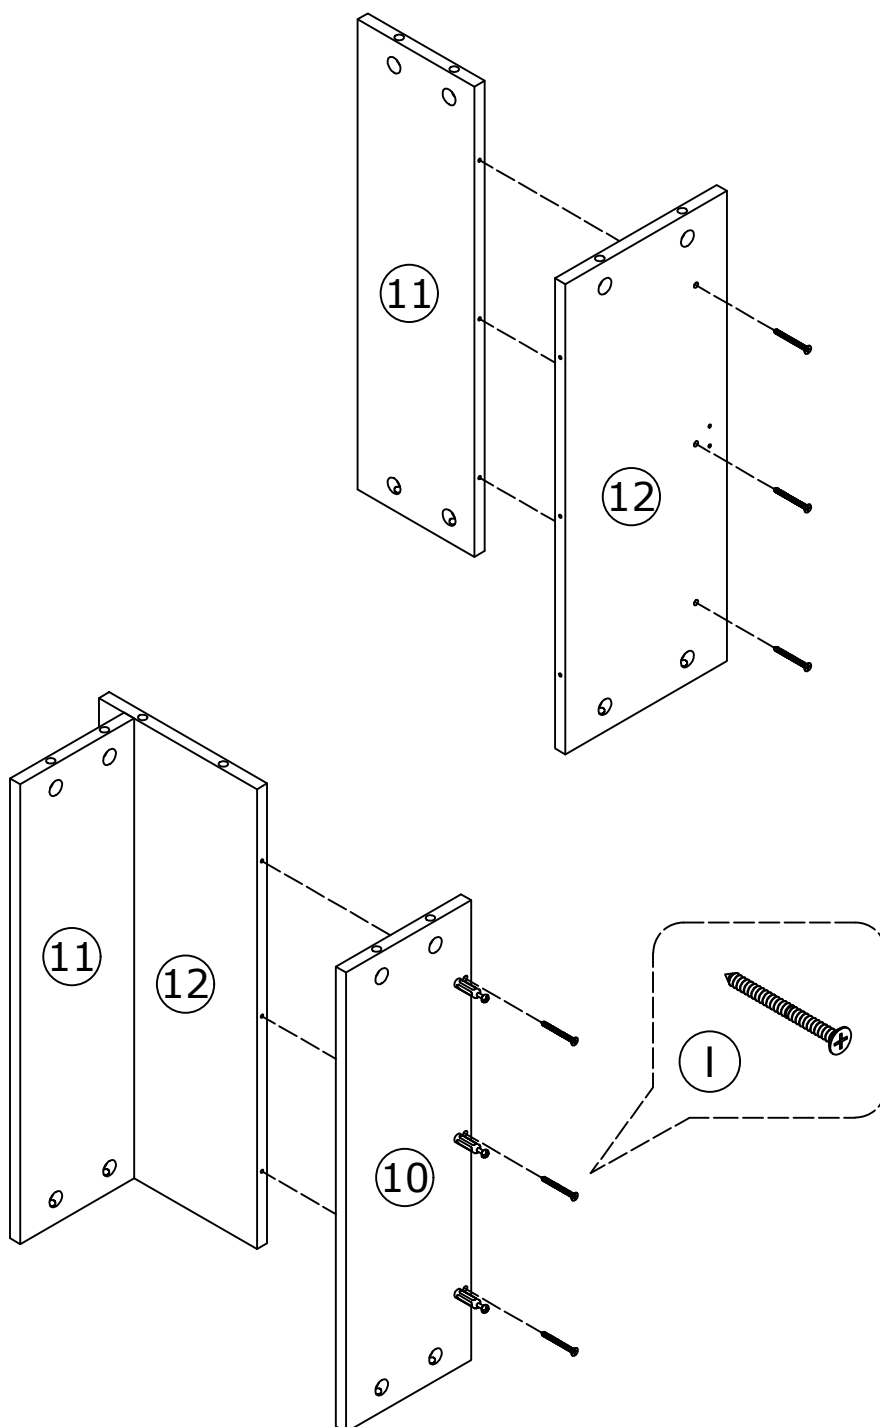


6





B x 3




Ø15 x 10 mm

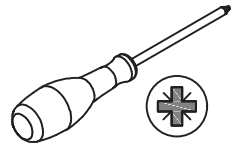



- Attach panel (8) to (10) and lock with cam (B).

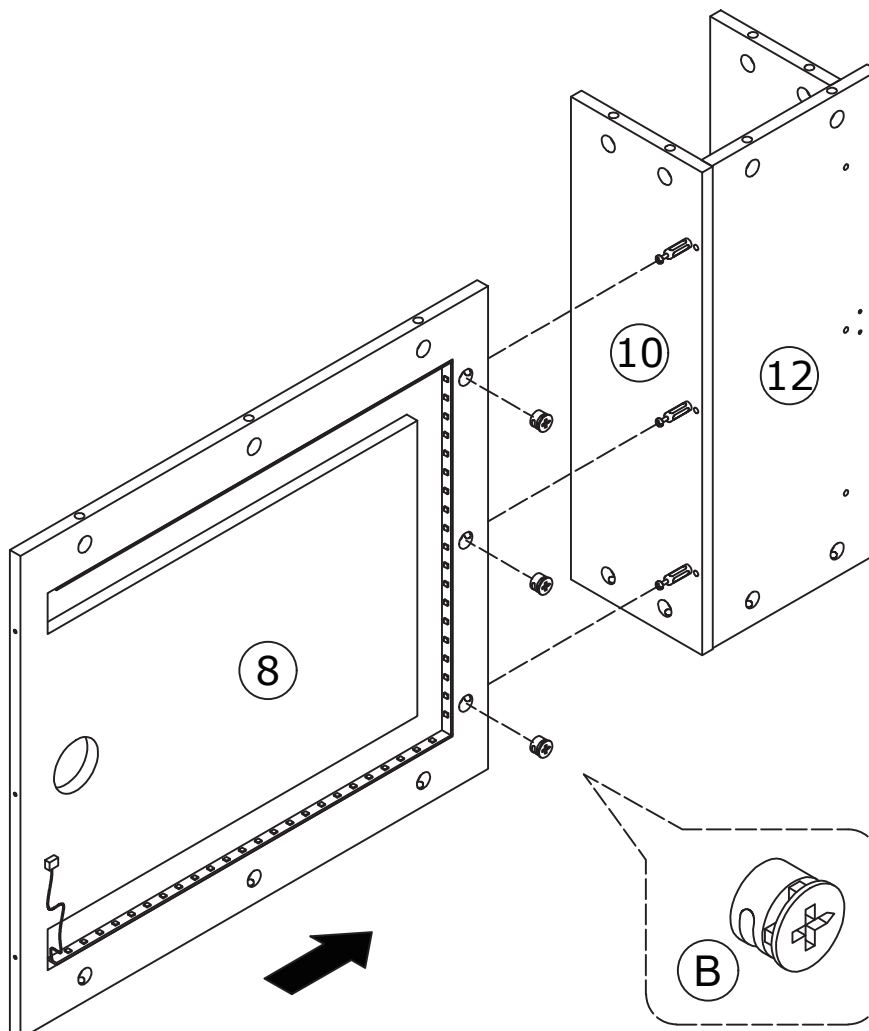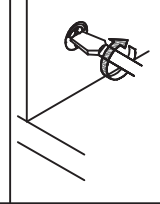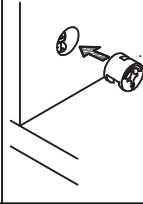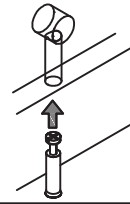



7

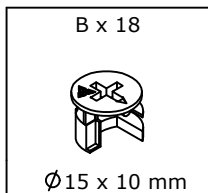


- Attach panel (9) to (8) & (10) & (11) & (12) and lock with cam (B).
- Flip the board 180°, Attach panel (7) to (8) & (10) & (11) & (12) and lock with cam (B).

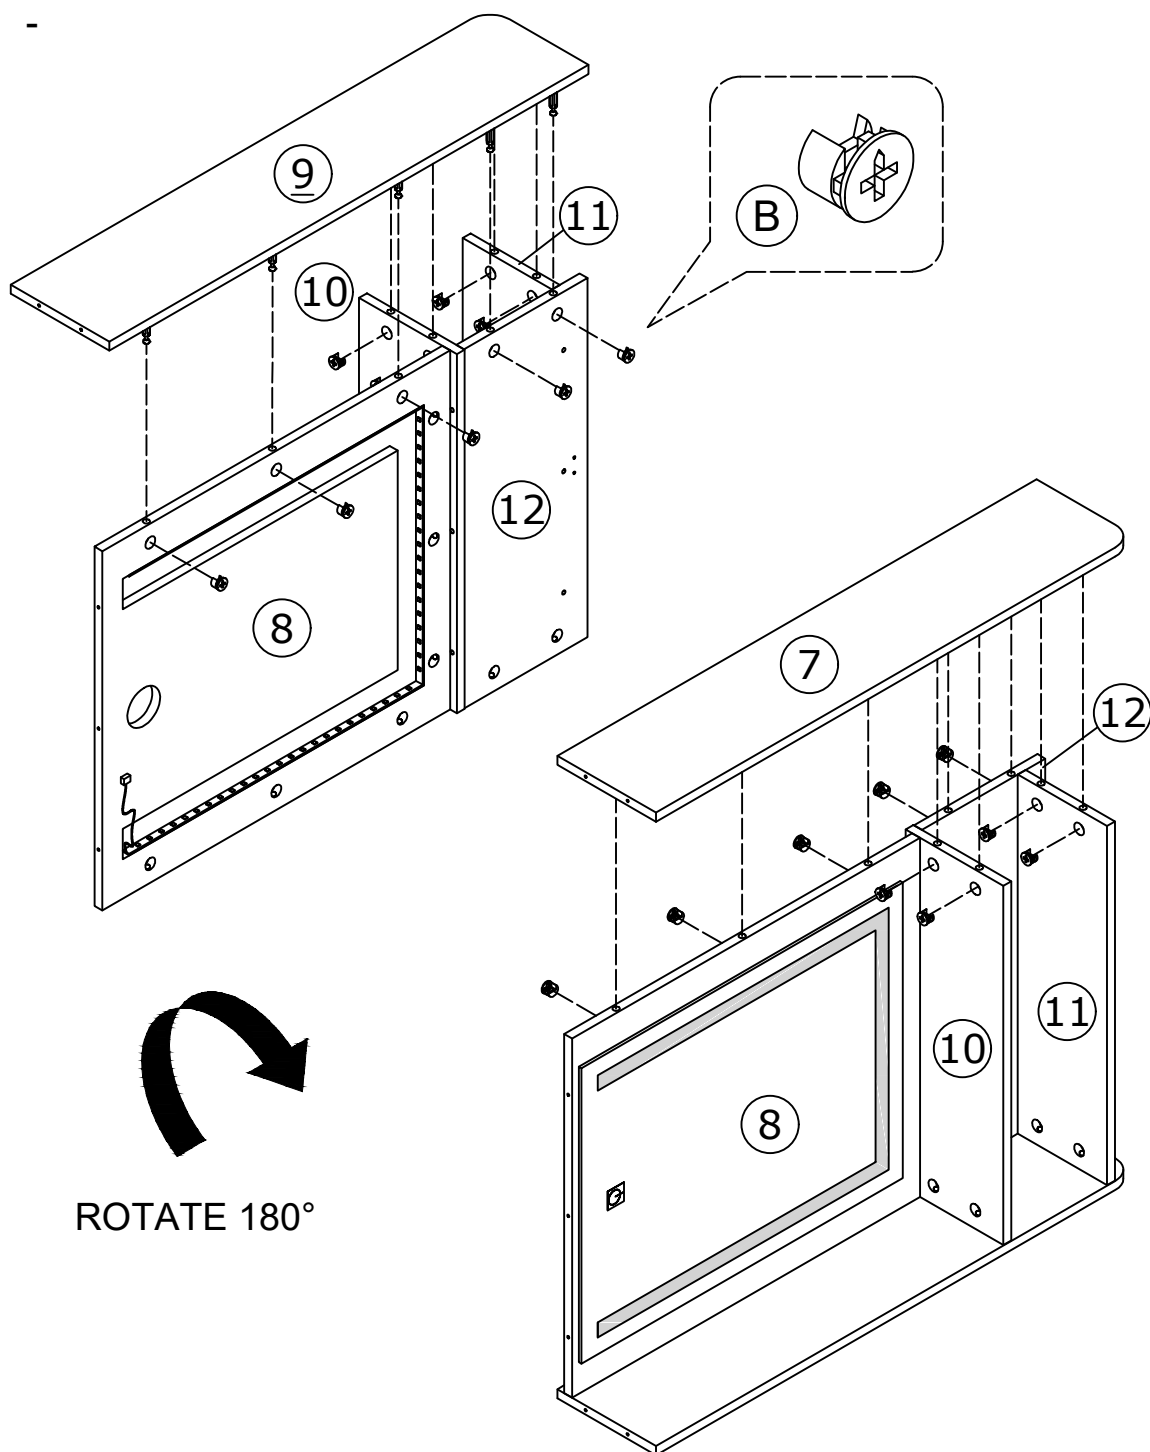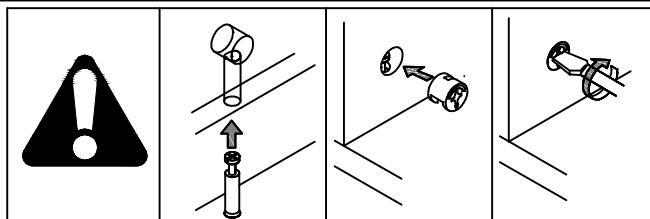



8

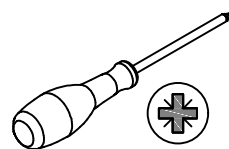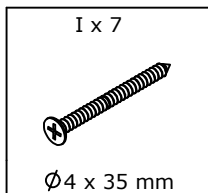



- Attach panel (1) to (7) & (8) & (9) with screws (I) .

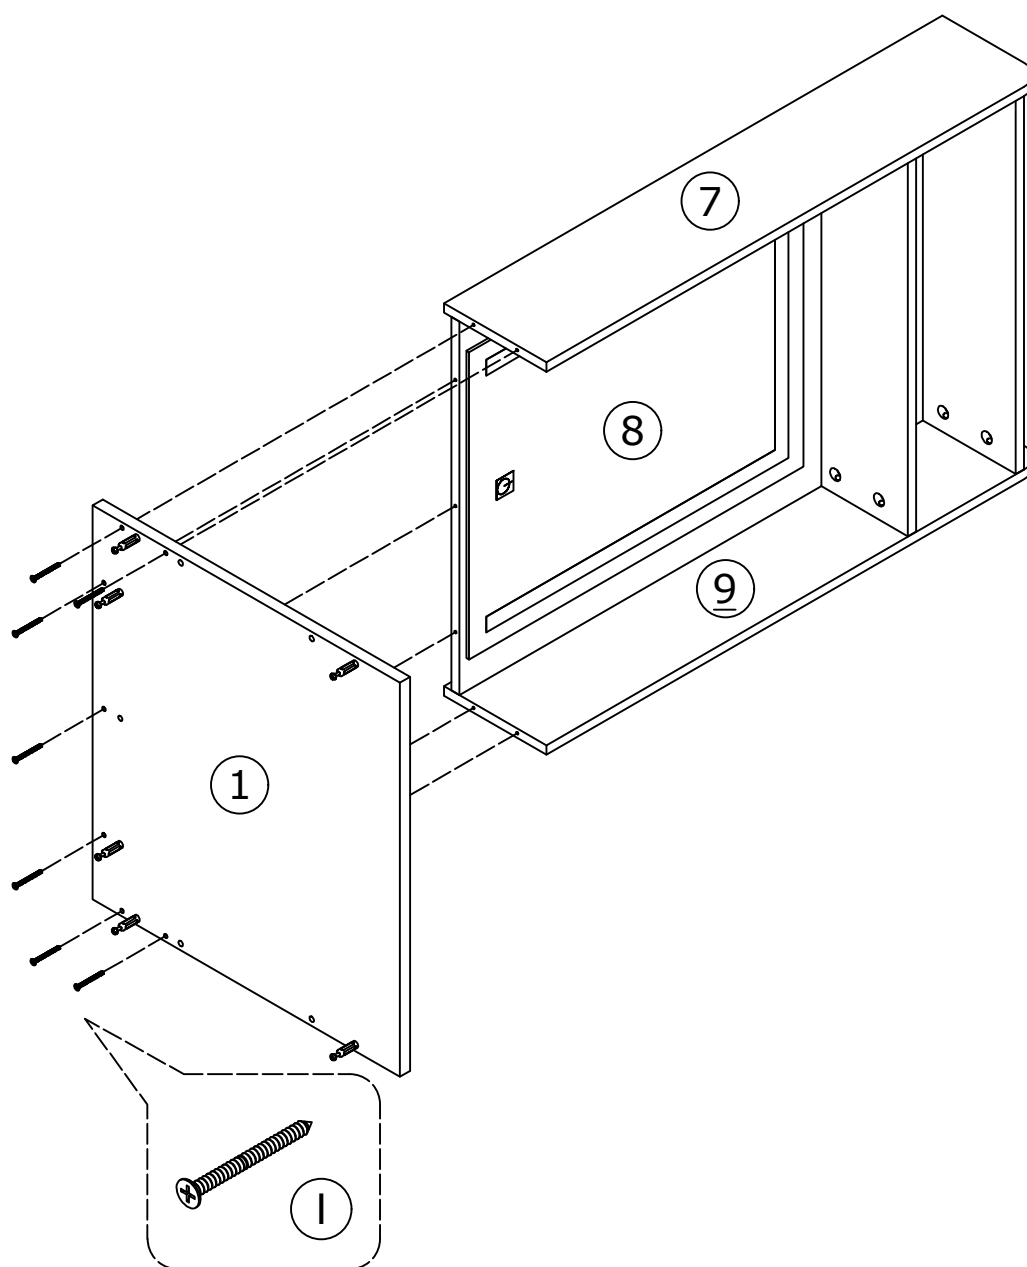

9

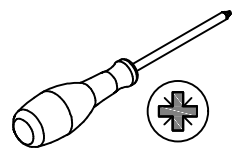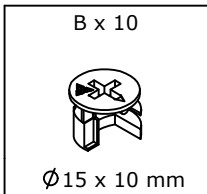

- Attach panel (2) & (3) to (4) & (5) and lock with cam (B).

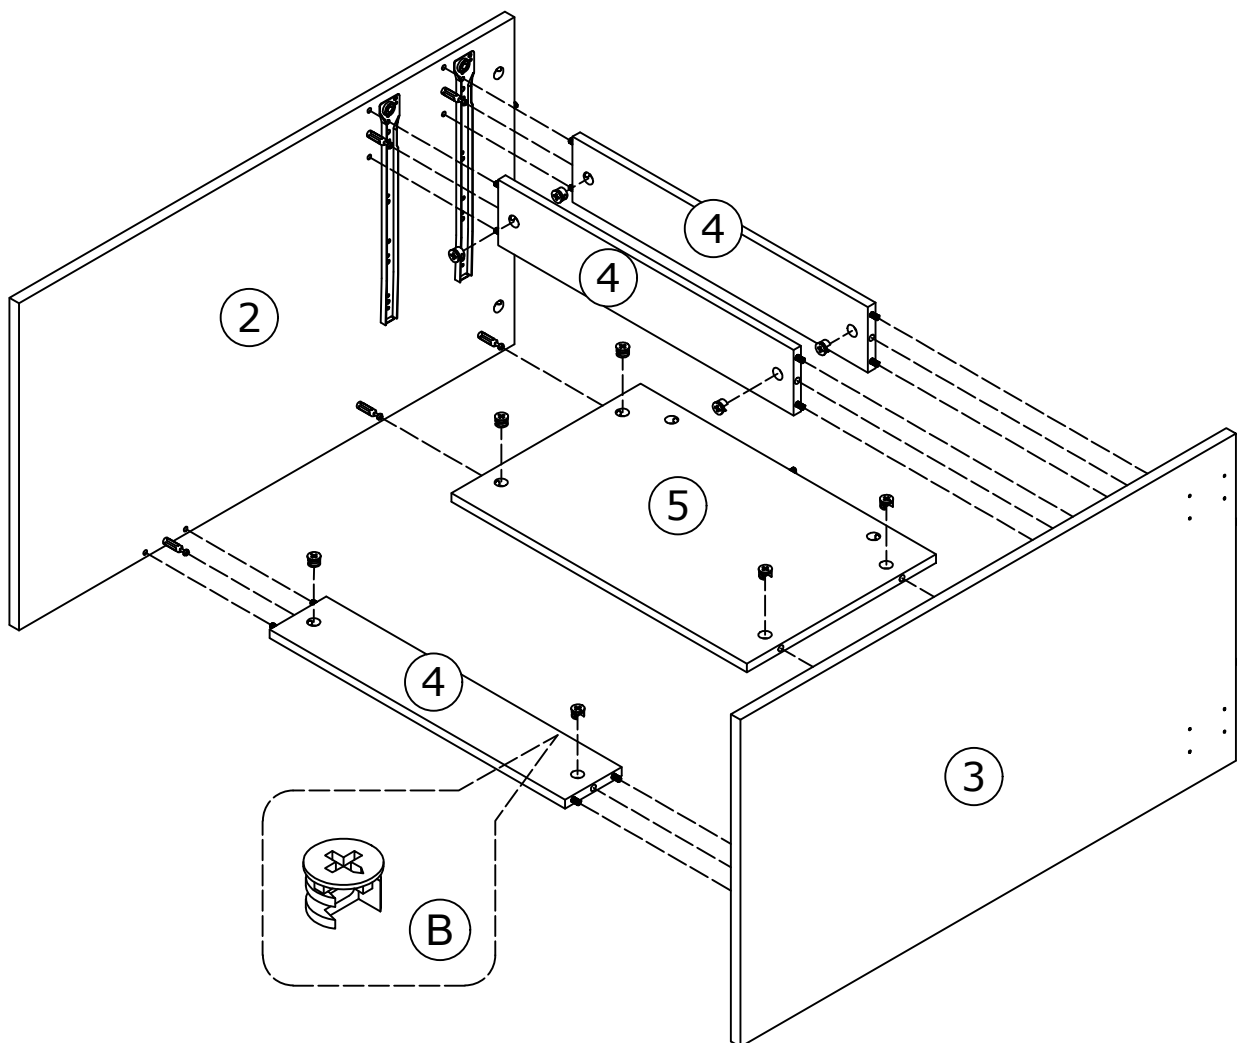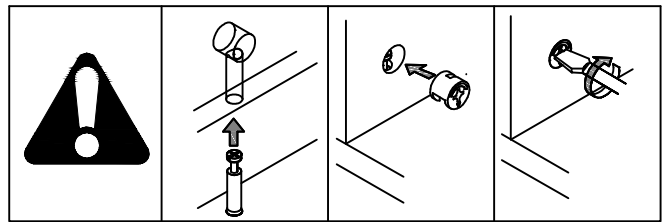


10





B x 6





Ø15 x 10 mm

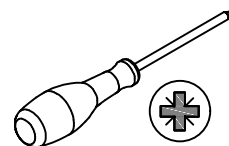



- Attach panel (1) to (2) & (3) & (5) and lock with cam (B).

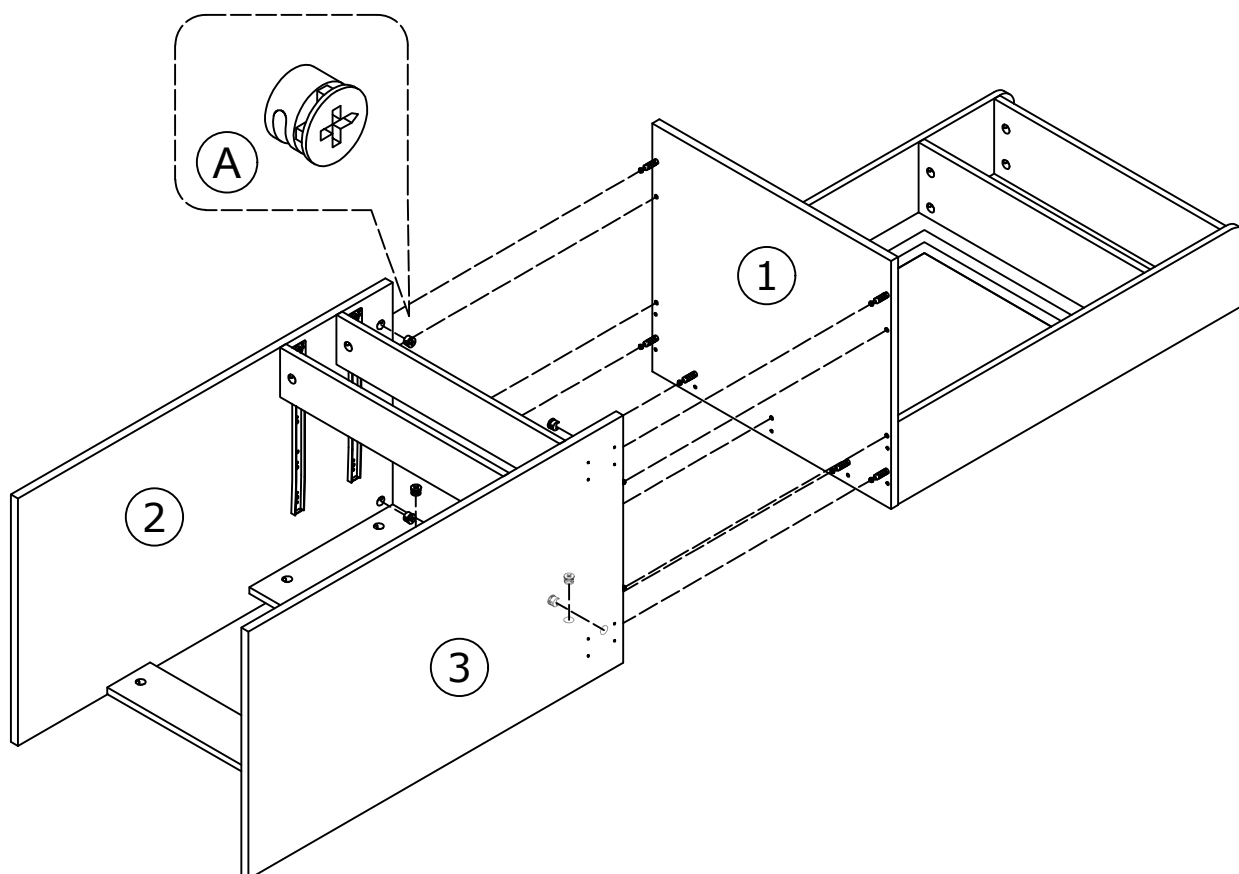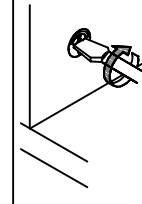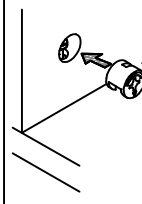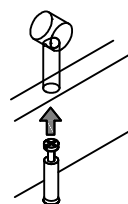





11

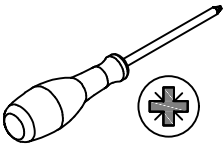A x 4  Ø7 x 31 mm	C x 4  Ø6 x 30 mm	K x 2 	L x 2  Ø4 x 18 mm	
--	--	--	---	---

- Screw the cam bolt (A) into the panel (17) .
- Install handle (K) to panel (17) with bolts (L).
- Insert wood dowels (C) into panel (18) & (19) .

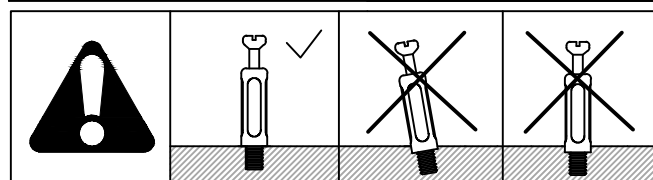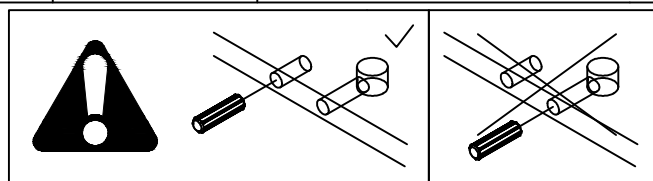


X2

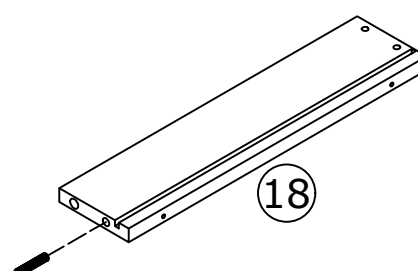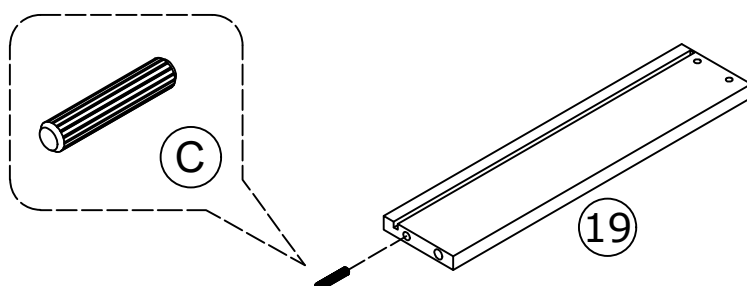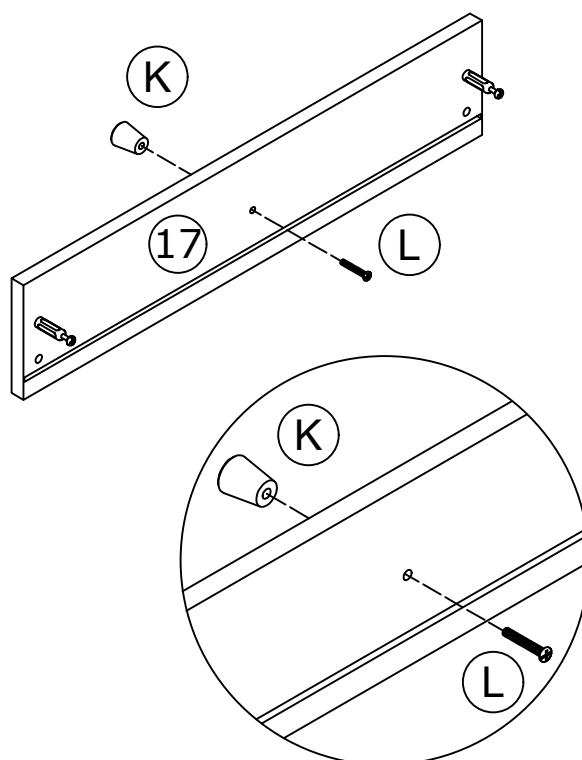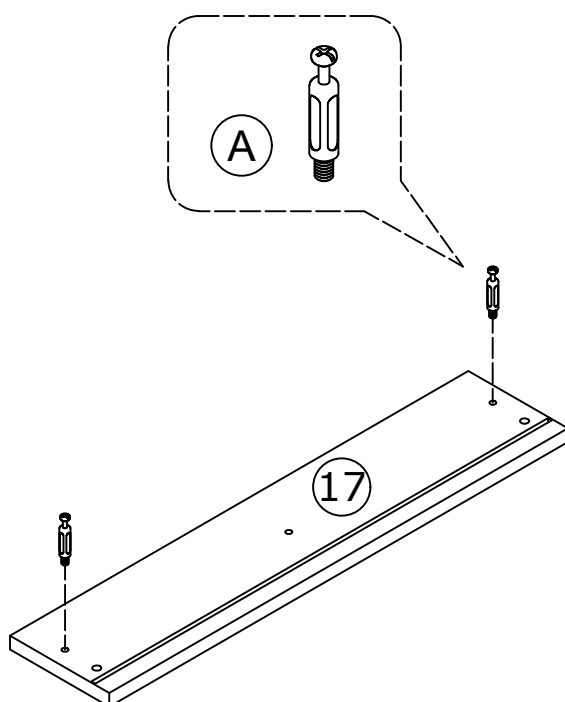





12

B x 4 Ø15 x 10 mm	I x 8 Ø4 x 35 mm	D x 8 Ø3.5 x 12 mm	
---------------------------------	--------------------------------	----------------------------------	--


- Attach panel (20) to (18) & (19) with screws (I).
- Attach panel (17) to (18) & (19) and lock with cam (B).
- Install drawer track (G) & (H) to panel (18) & (19) with screws (D)

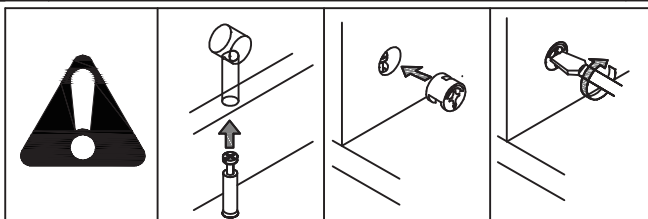


X2

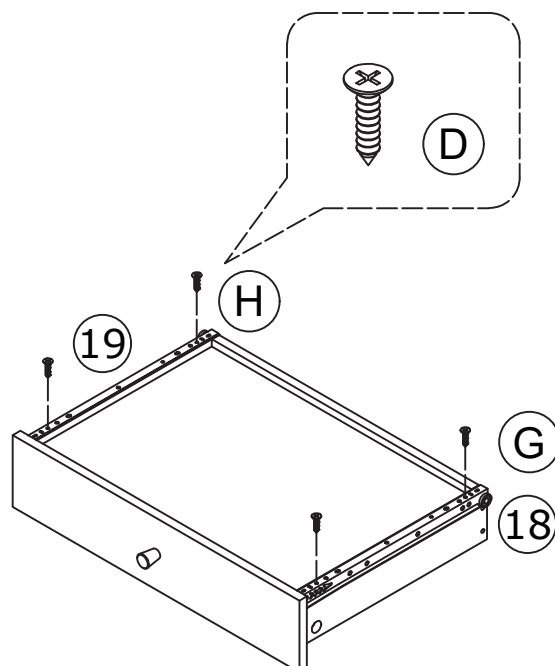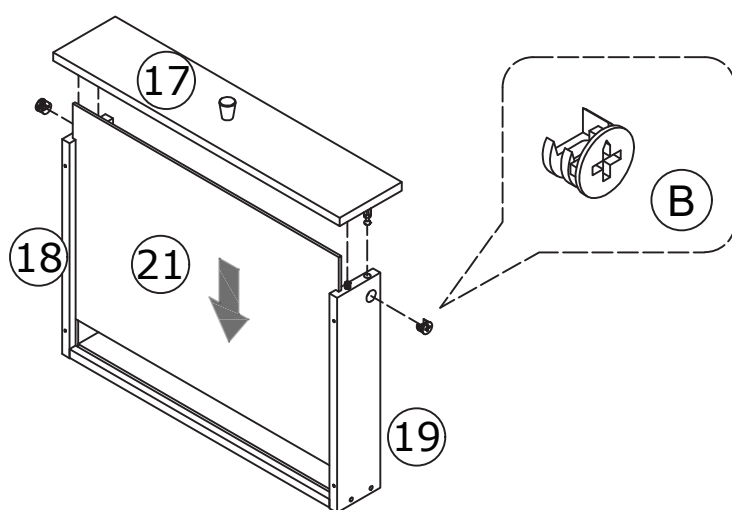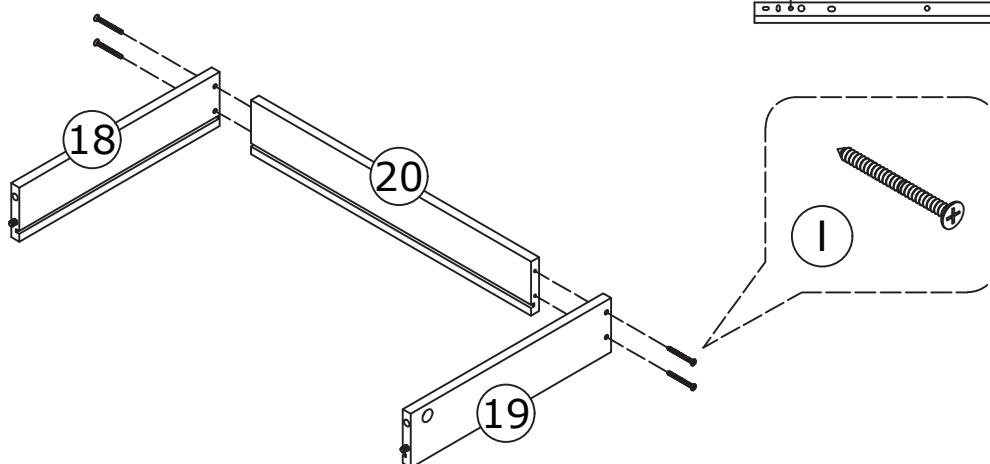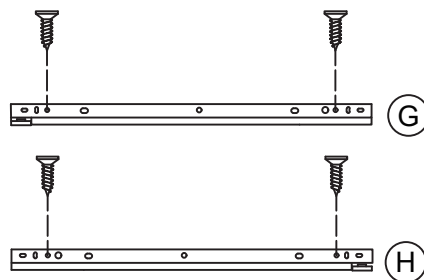

13

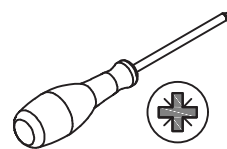


- Insert the drawers.

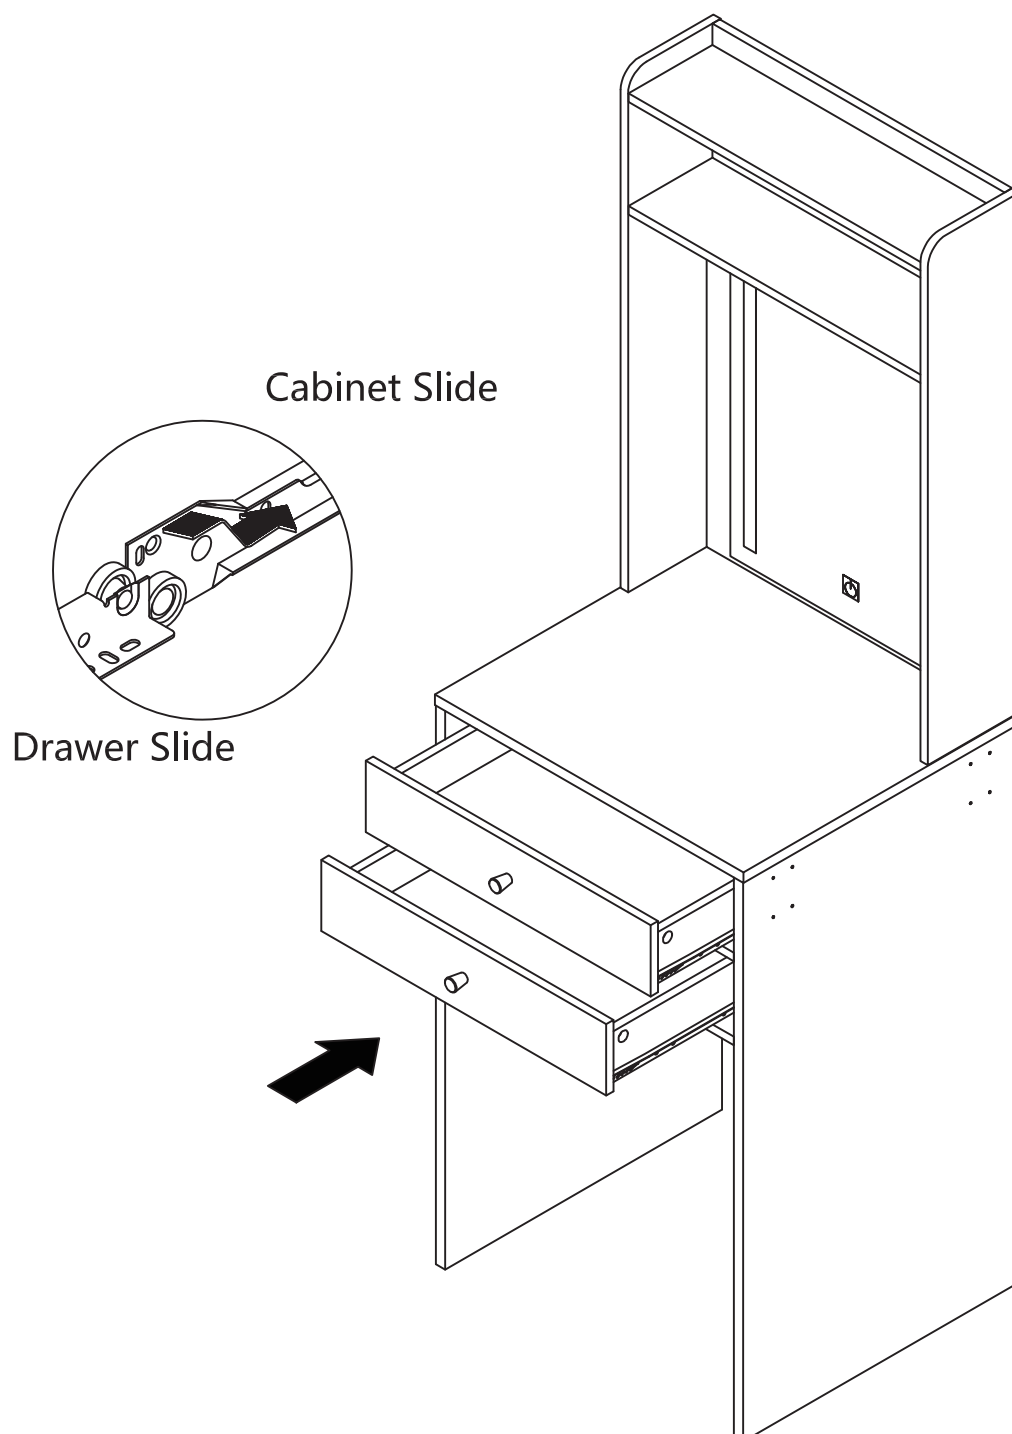


14





A x 16



Ø7 x 31 mm

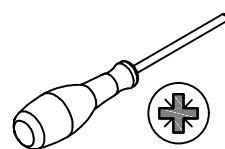

Screw the cam bolt (A) into the panel (13) & (14) & (15) .

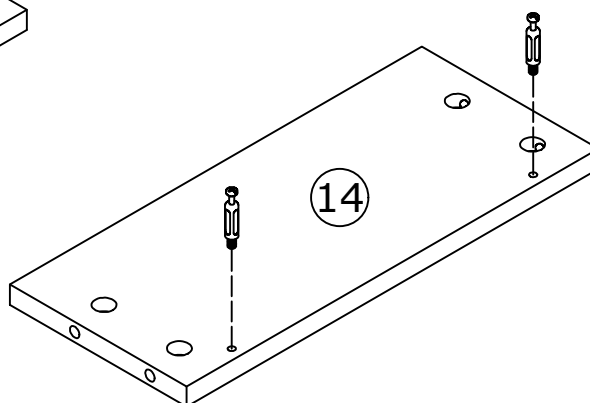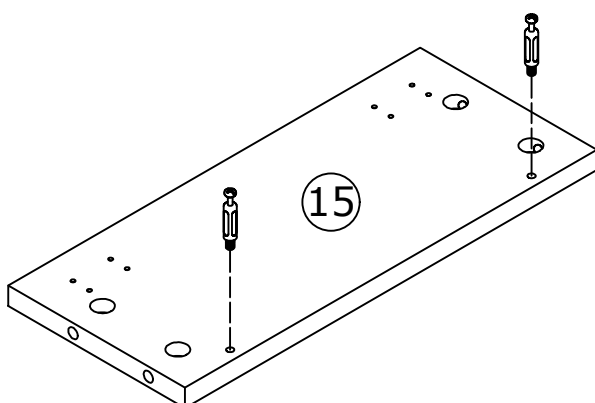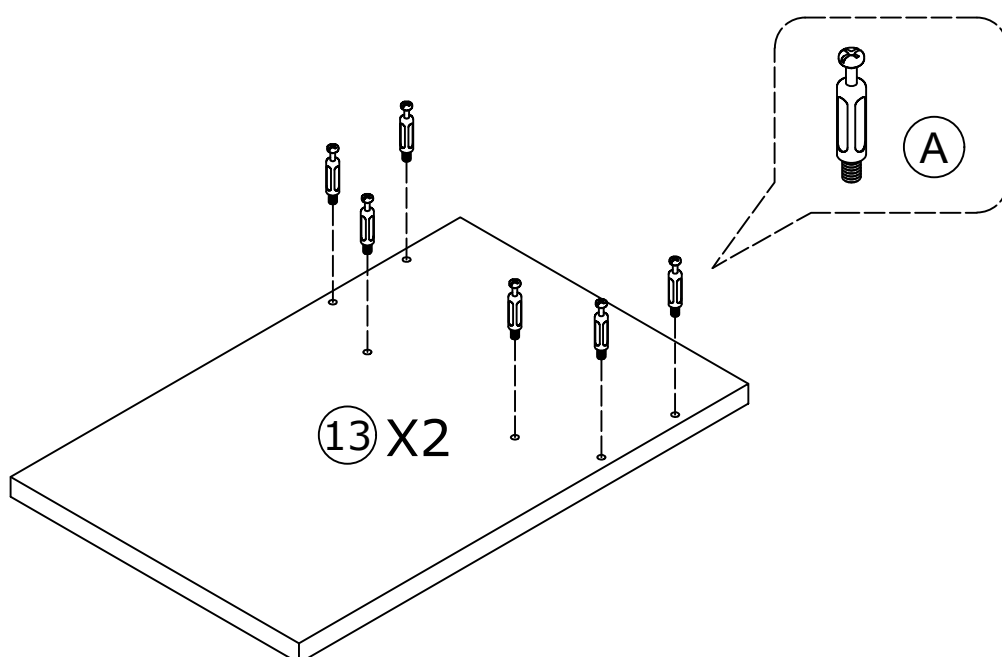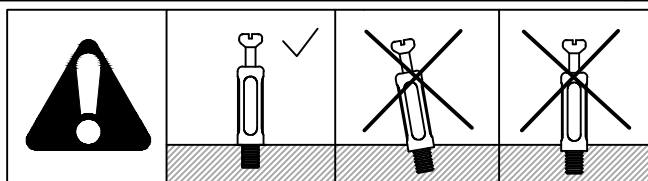


15






B x 16



Ø15 x 10 mm

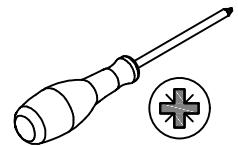


- Attach panel (16) to (14) & (15) and lock with cam (B).
- Attach panel (13) to (14) & (15) & (16) and lock with cam (B).

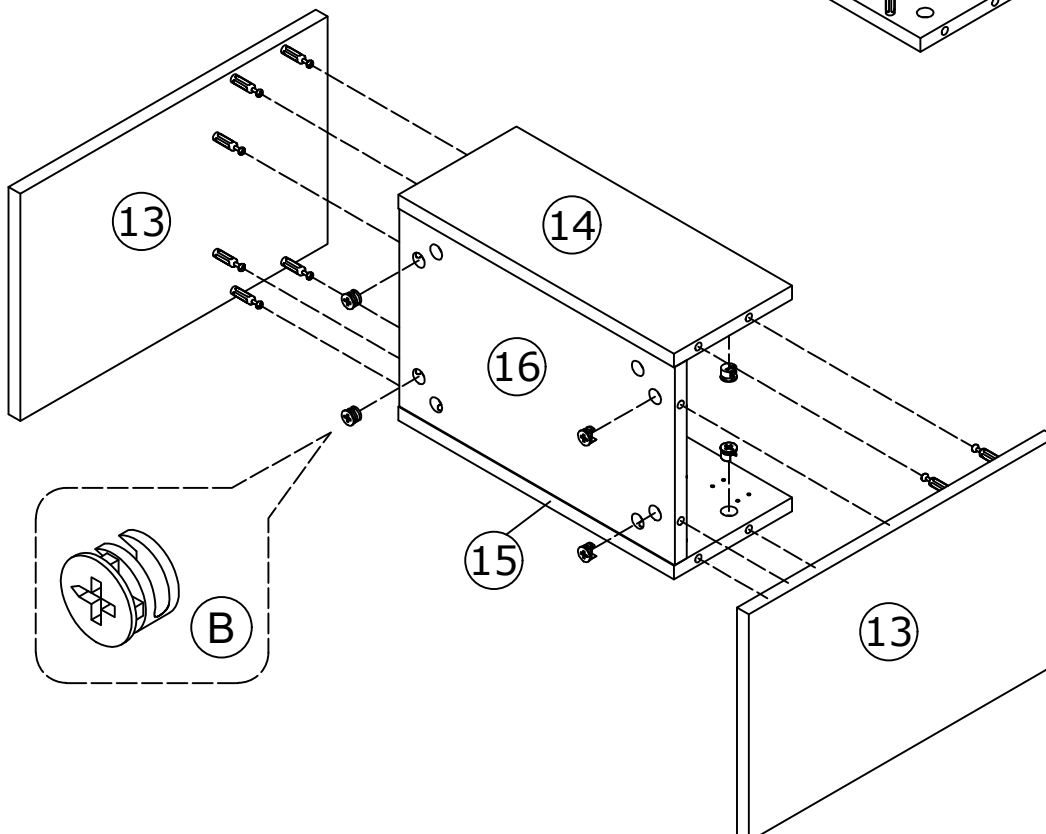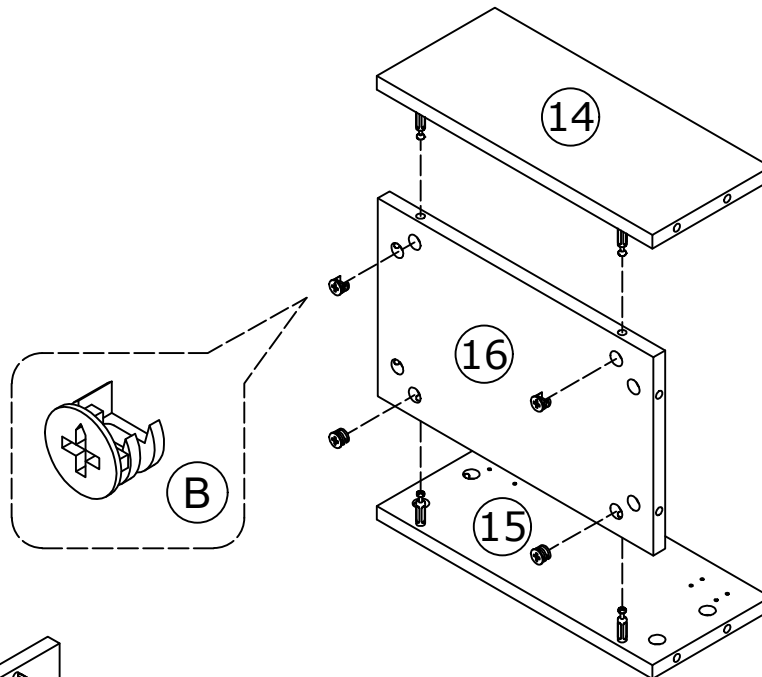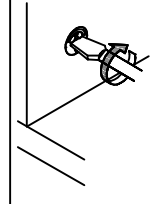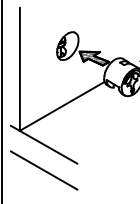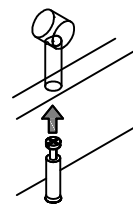



16















- Attach hinge (M) to panel (22) with screws (D) .
- Attach hinge (M) to panel (15) with screws (D) .

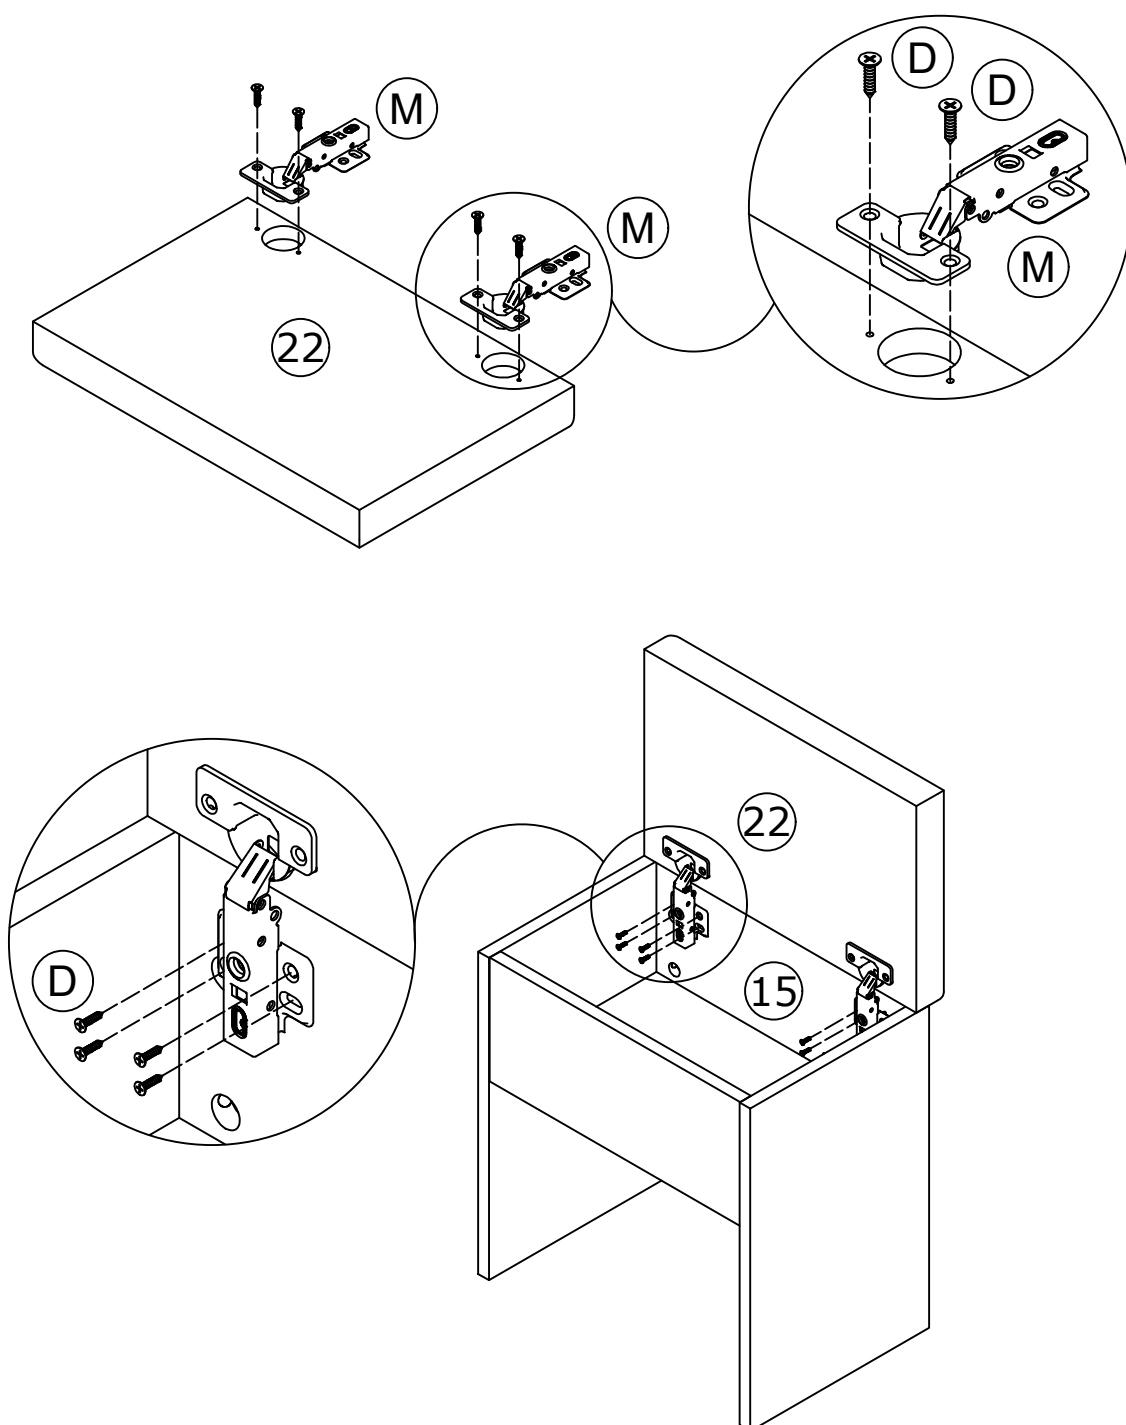

17

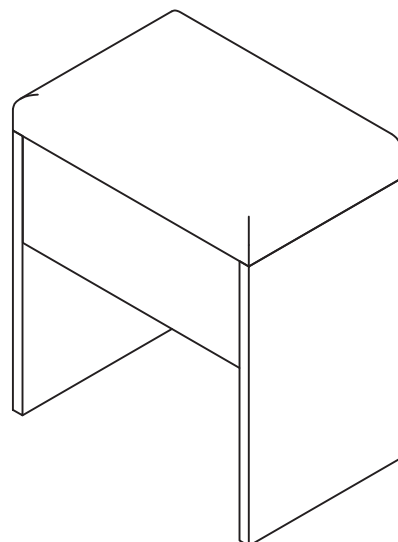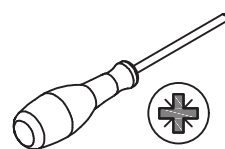




- If there is misalignment after you install,
adjust the screw to the best condition

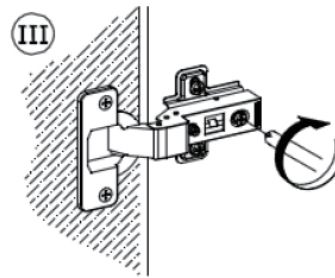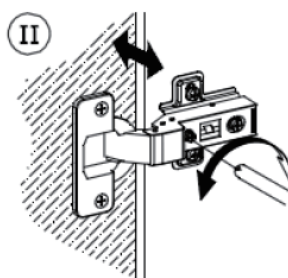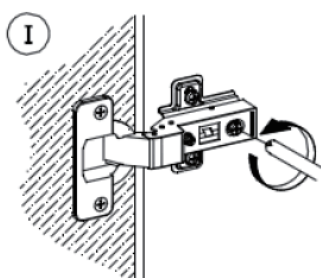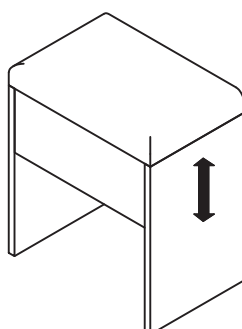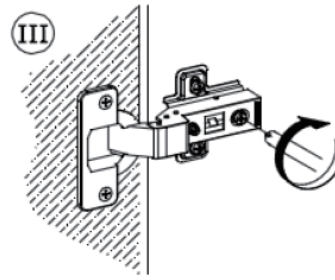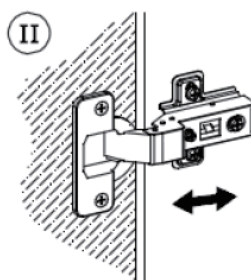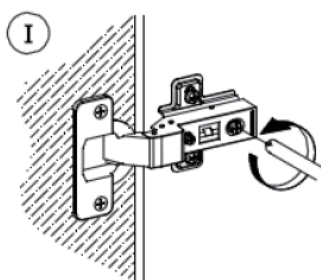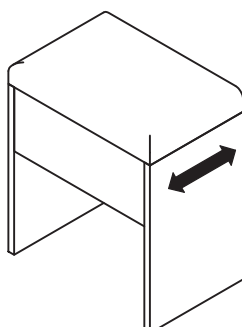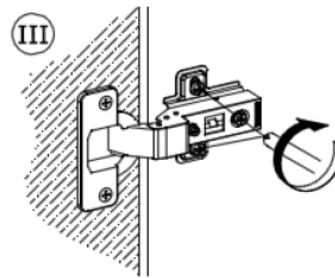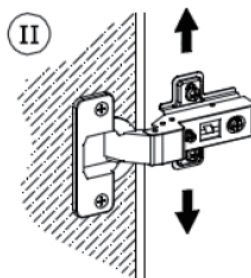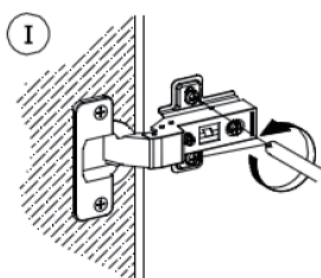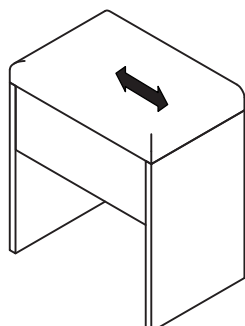

18




- Attach folding bracket (J) to panel (6) with screws (D) .

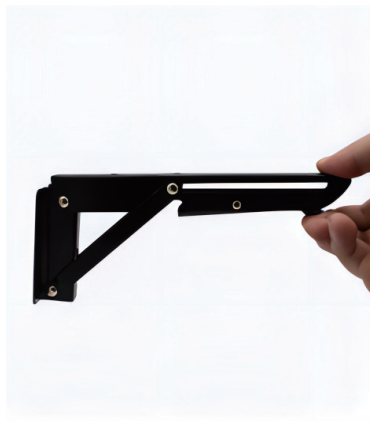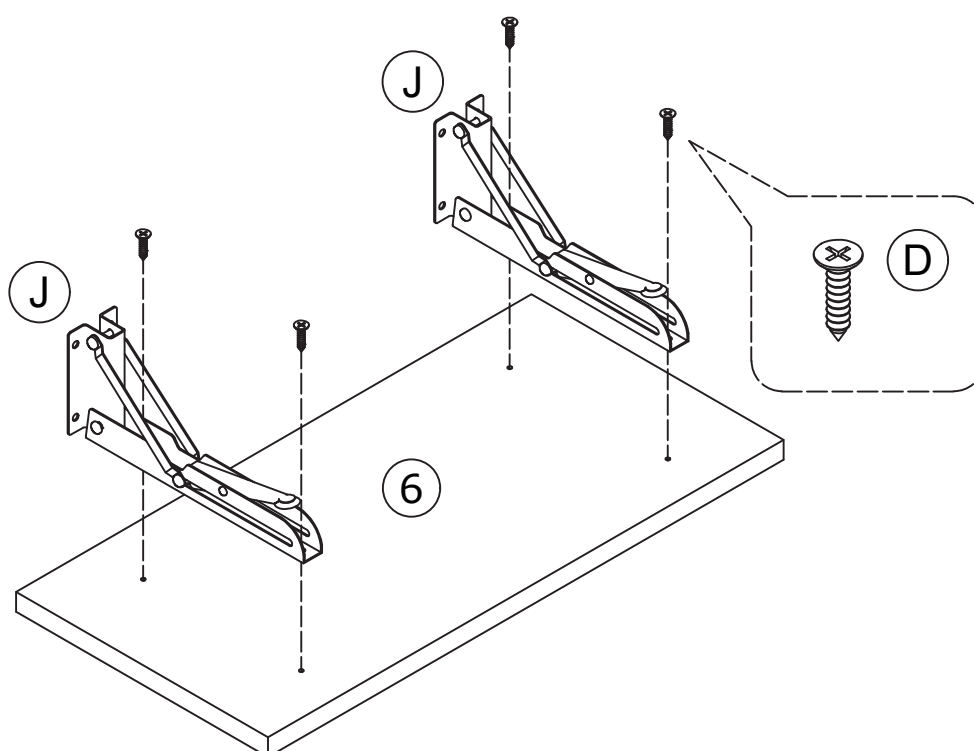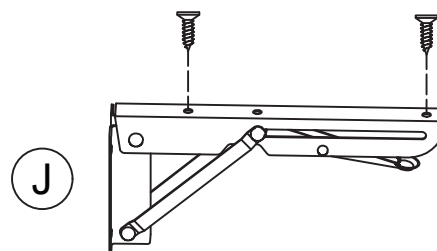


19



D x 8



Ø3.5 x 12 mm

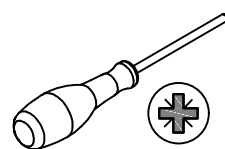


- Attach folding bracket (J) to panel (3) with screws (D) .



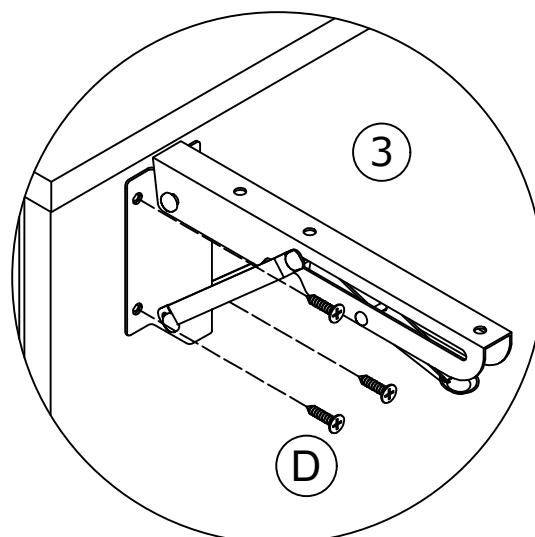
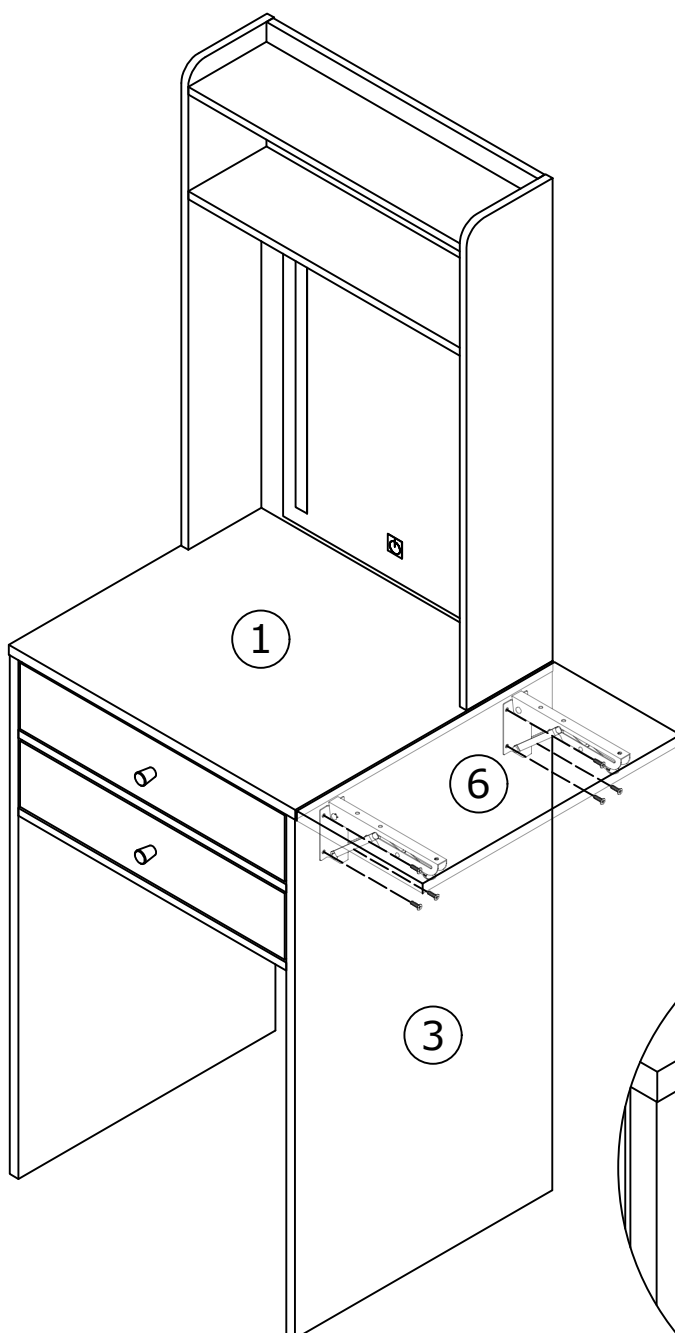


20


- Tear the tape from the lamp belt controller and stick it to the mirror.
- Connect the lamp belt power supply to the lamp belt controller

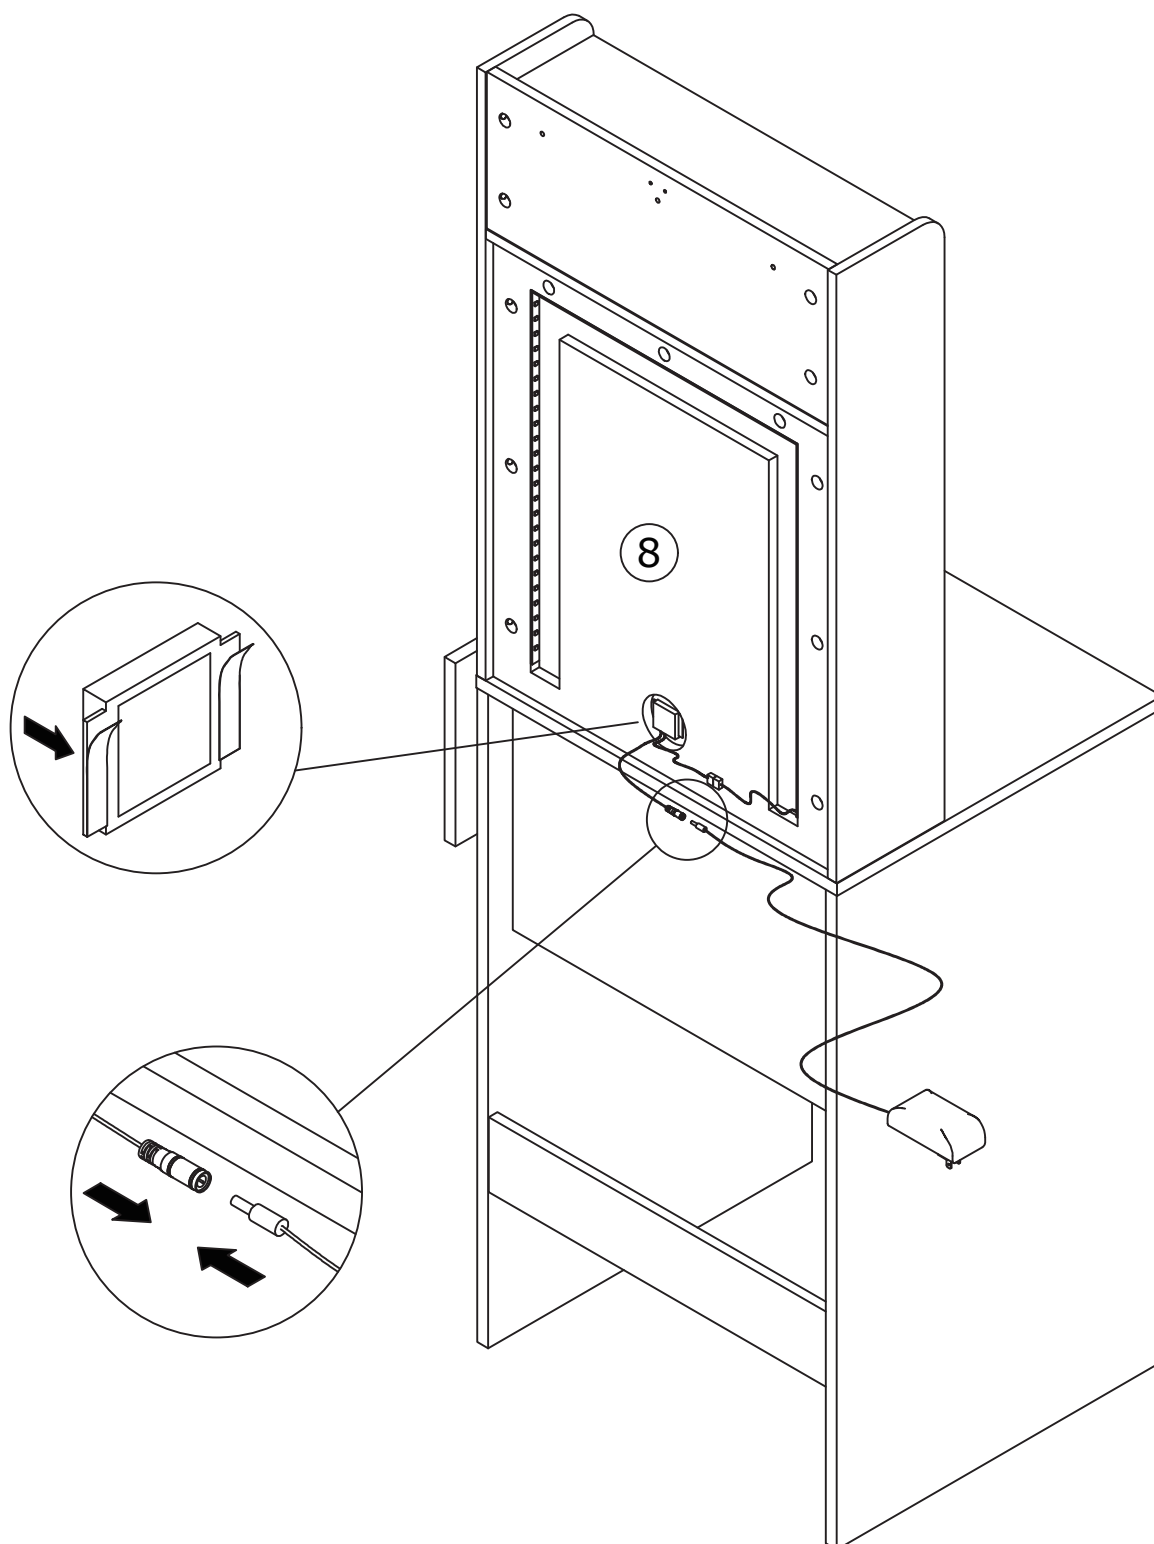


21

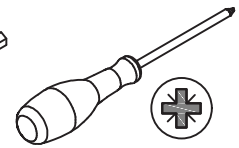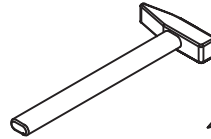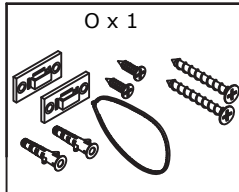


Install the tipping restraint hardware

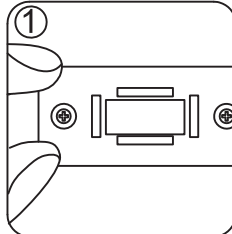

make mark on the wall

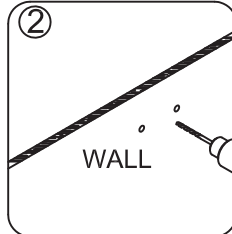


drill two Ø6 holes on the wall

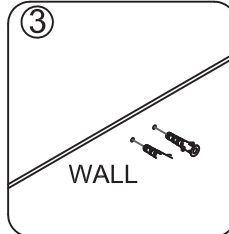


put two anchors in the holes




NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

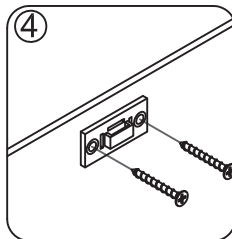


fix the device on the wall by the long screws

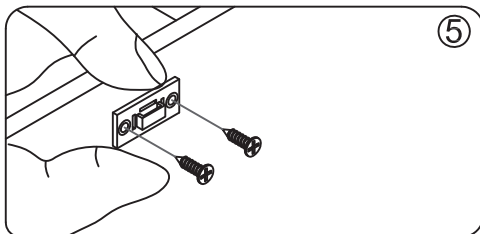

fix the device on the back of cabinet by short screws

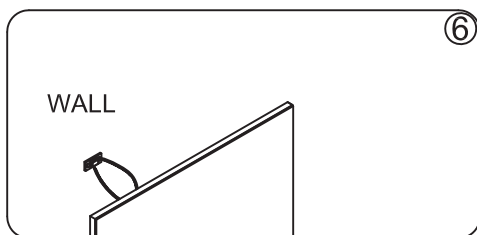

We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.

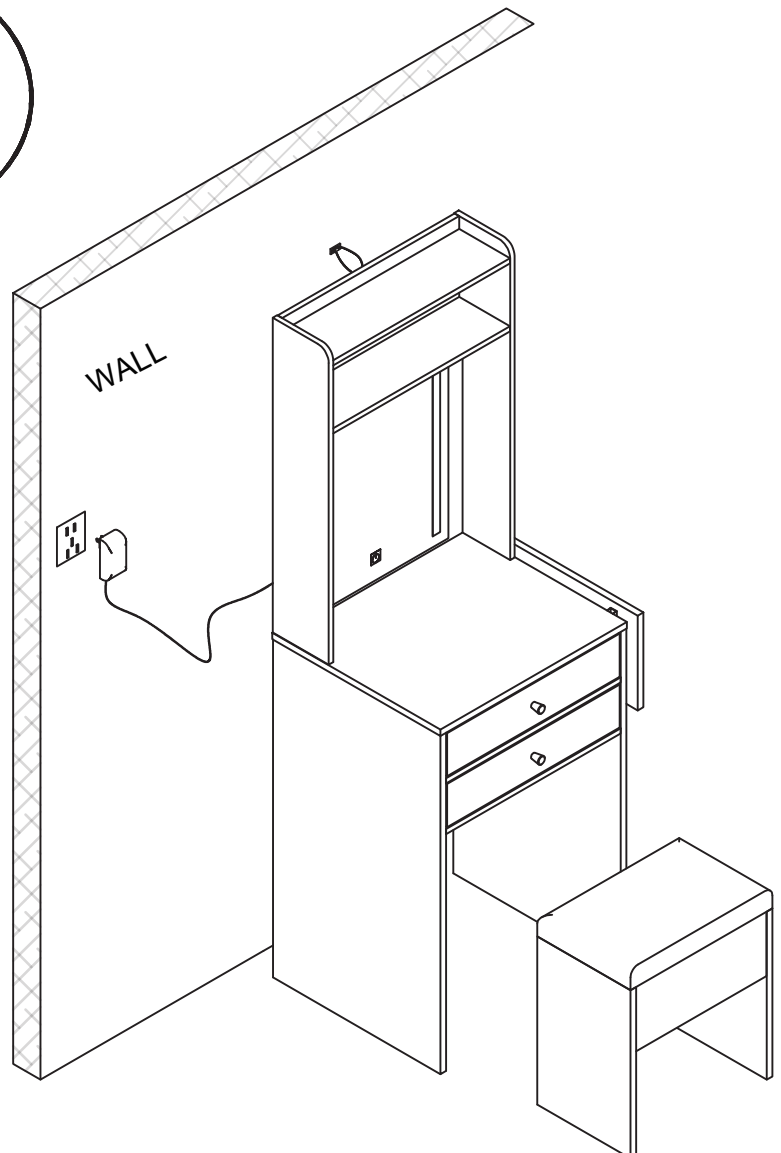

- Usage of touch sensitive light strip

- Three-color switching + stepless dimming
- Turn it on for white light, click again for warm light, and click for the third time for neutral light;
- you can long press stepless dimming under different colors of lights.
- (Turn on for white light and long press for dimming)
- (Click again for warm light and long press for dimming)
- (Third click for neutral light and long press for dimming)
- (Last click to turn off the light)

