



STEP 1




Ø8 × 30mm × 4


(screwdriver not included)

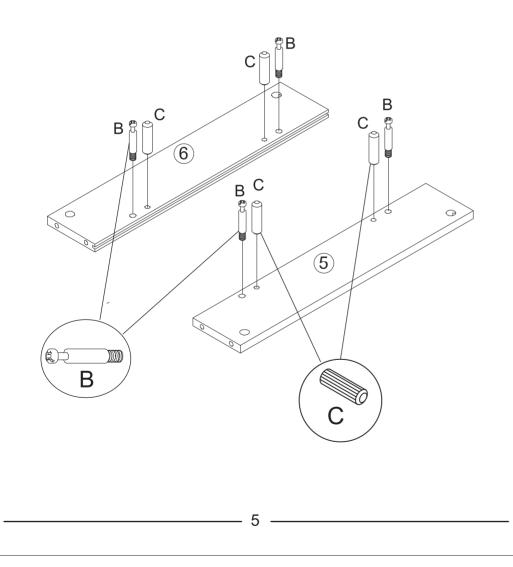


PRODUCT ASSEMBLY

STEP 2



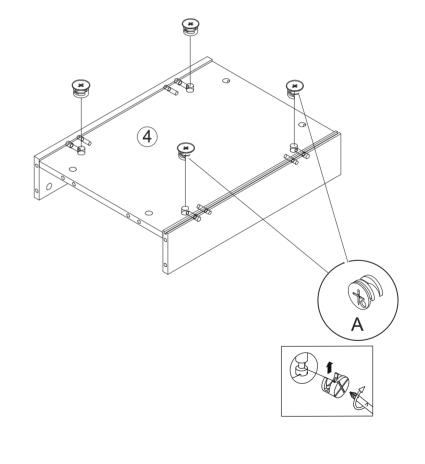


- 6 _____

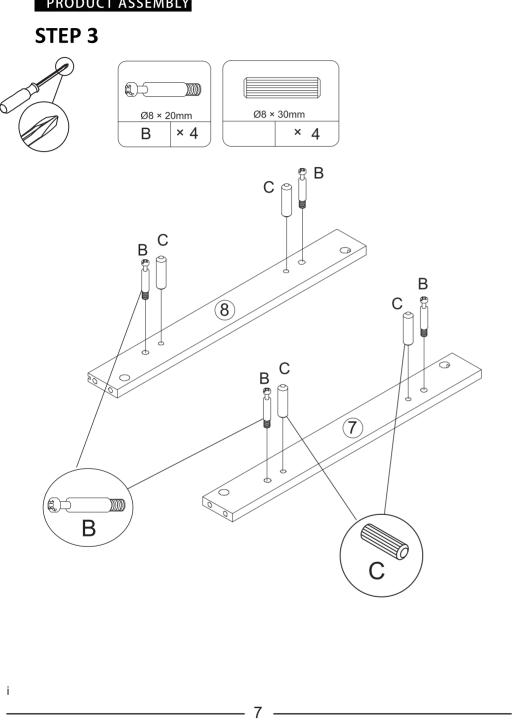

PRODUCT ASSEMBLY

STEP 4




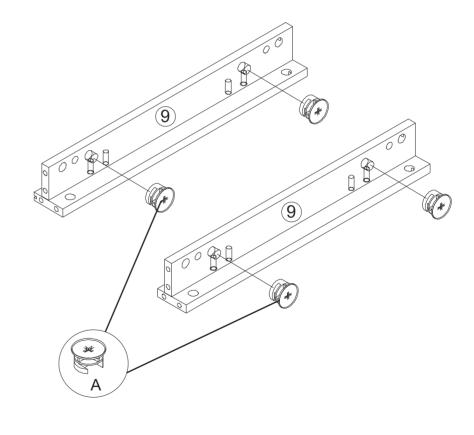


- 8

STEP 5






(screwdriver not included)

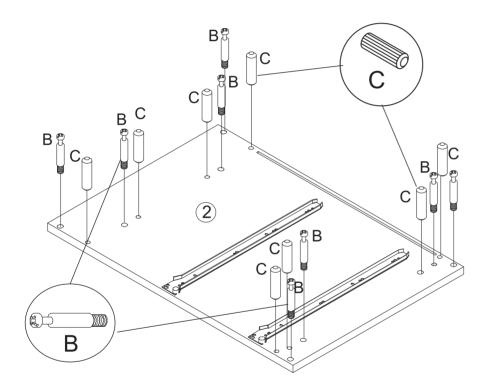


- 9


PRODUCT ASSEMBLY

STEP 6

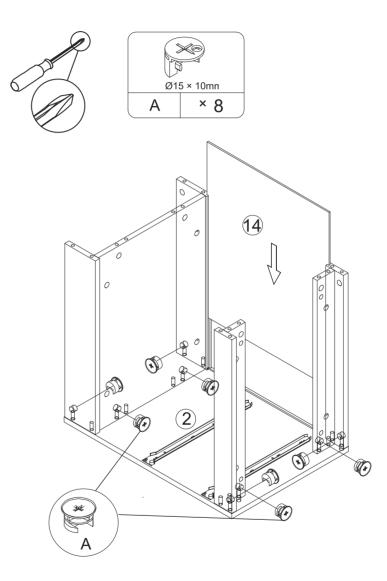


- 10 -

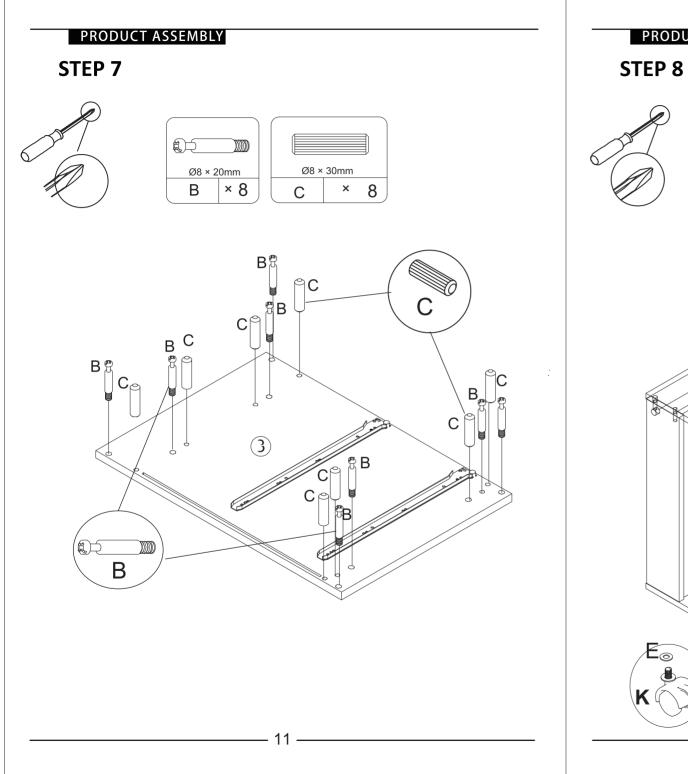


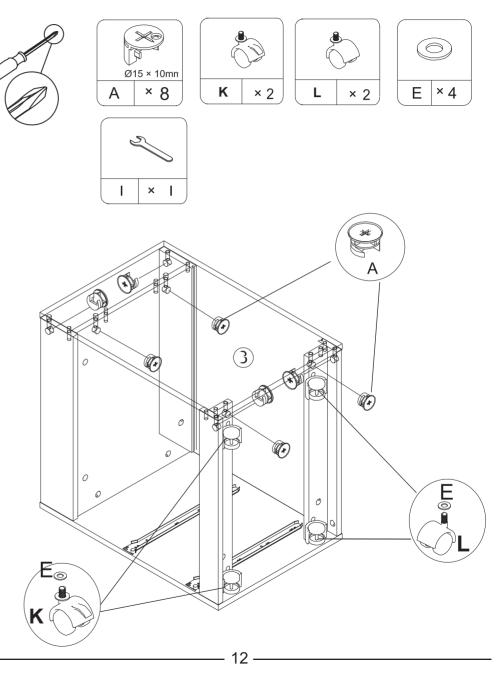

STEP 9



М	×

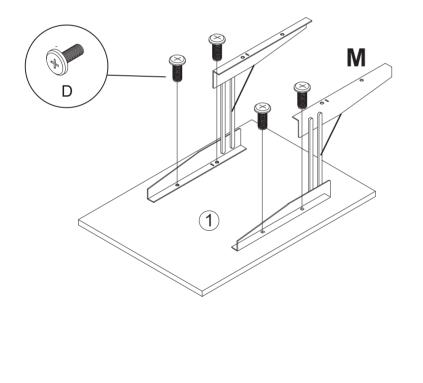


PRODUCT ASSEMBLY STEP 10 M6*12mm × 4 D 1 8 \otimes D

— 14 ———

STEP 11






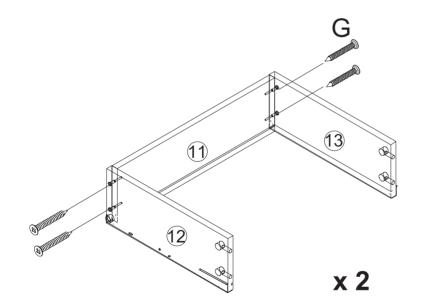

PRODUCT ASSEMBLY


STEP 12

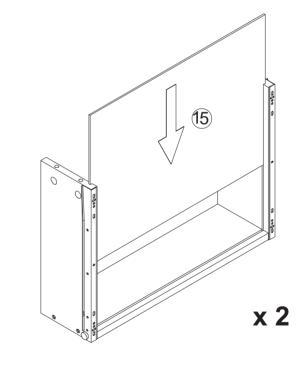


— 16 ———

_____ 15 _____

STEP 13




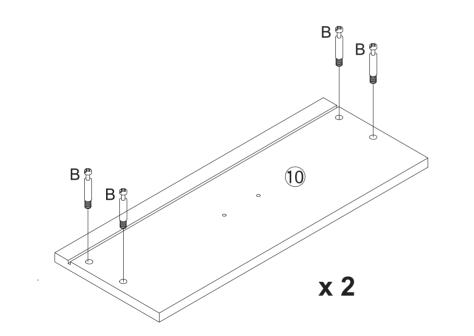


_____ 17 _____

PRODUCT ASSEMBLY

STEP 14




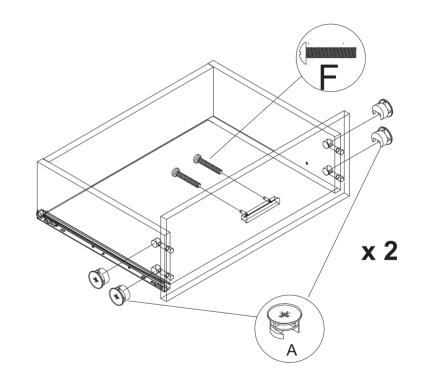


— 18 ———



STEP 15

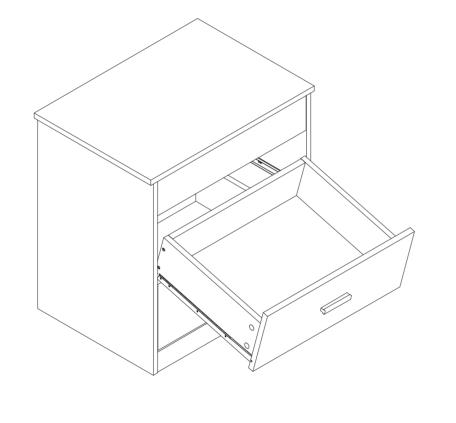

PRODUCT ASSEMBLY

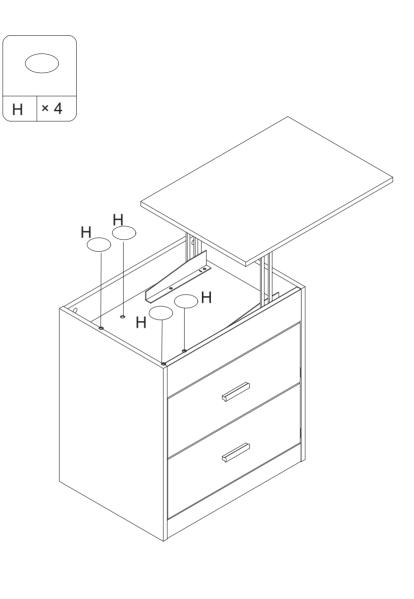

– 20 —

_____ 19 _____